INSTALLATION INSTRUCTIONS

BUILT-IN SIDE-BY-SIDE REFRIGERATOR/FREEZER

Retain for Future Reference

VIKING RANGE CORPORATION
111 Front Street
Greenwood, Mississippi 38930 USA
(662) 455-1200

IMPORTANT - PLEASE READ AND FOLLOW

Make sure that incoming voltage is the same as unit rating. An electric rating plate specifying voltage, frequency, wattage, amperage, and phase is attached to the product.

To reduce the risk of fire, electric shock, or injury to persons, installation work and electrical wiring must be done by qualified people in accordance with all applicable codes and standards, including fire-rated construction.

The installer should leave these instructions with the consumer who should retain them for local inspector's use and for future reference.

GENERAL INFORMATION

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you and others. All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING". These words mean:

⚠ DANGER

You will be killed or seriously injured if you don't follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance if injury, and tell you what can happen if the instructions are not followed.

⚠ WARNING

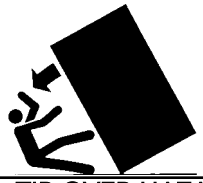

TIP OVER HAZARD

Refrigerator is top heavy and tips easily when not completely installed.
Keep doors closed until refrigerator is completely installed and secured per installation instructions.
Use two or more people to move and install refrigerator. Failure to do so can result in death or serious injury.

Most of the refrigerator's weight is at the top. Extra care is needed when moving the refrigerator to prevent tipping. Use cardboard shipping material or plywood under refrigerator until it is installed in the operating position to protect floor surface.

It is your responsibility to :

-comply with installation specifications and dimensions
-properly install refrigerator
-remove any moldings or decorative panels that prevent the refrigerator from being serviced
-make sure that you have these materials (not provided with your refrigerator), which are necessary for proper installation:
  1/4" (6 mm) copper tubing with shutoff valve
  6 - #8 x 3" (7.6 cm) wood screws (Longer screws may be required.)
  1 - Saddle valve (Do not use self-piercing feature of the valve)

-assure that floor will support refrigerator, door panels and contents (approximately 1200 pounds [540 kg])
-provide a properly grounded electrical outlet
-assure that location will permit appliance doors to open 90° minimum

FEATURES OF YOUR REFRIGERATOR (NON-DISPENSER MODEL)

1. Electronic controls
2. Dairy compartments (2)
3. Adjustable door bins (4)
4. Meat Savor™/Produce Drawer (1)
5. Moisture-controlled produce drawer
   - 42″ W. models (1) full width
   - 48″ W. models (2) half width
6. Spillproof shelves (5)
7. Deli Compartment drawer
   - 42″ W. models (1) full width
   - 48″ W. models (2) half width
8. Non-adjusting freezer shelf (1)
9. Ice bucket (1)
10. Glide-out frezzer baskets (2)
11. Adjustable freezer shelves (3)
12. Adjustable freezer door bins (4)
13. Lights

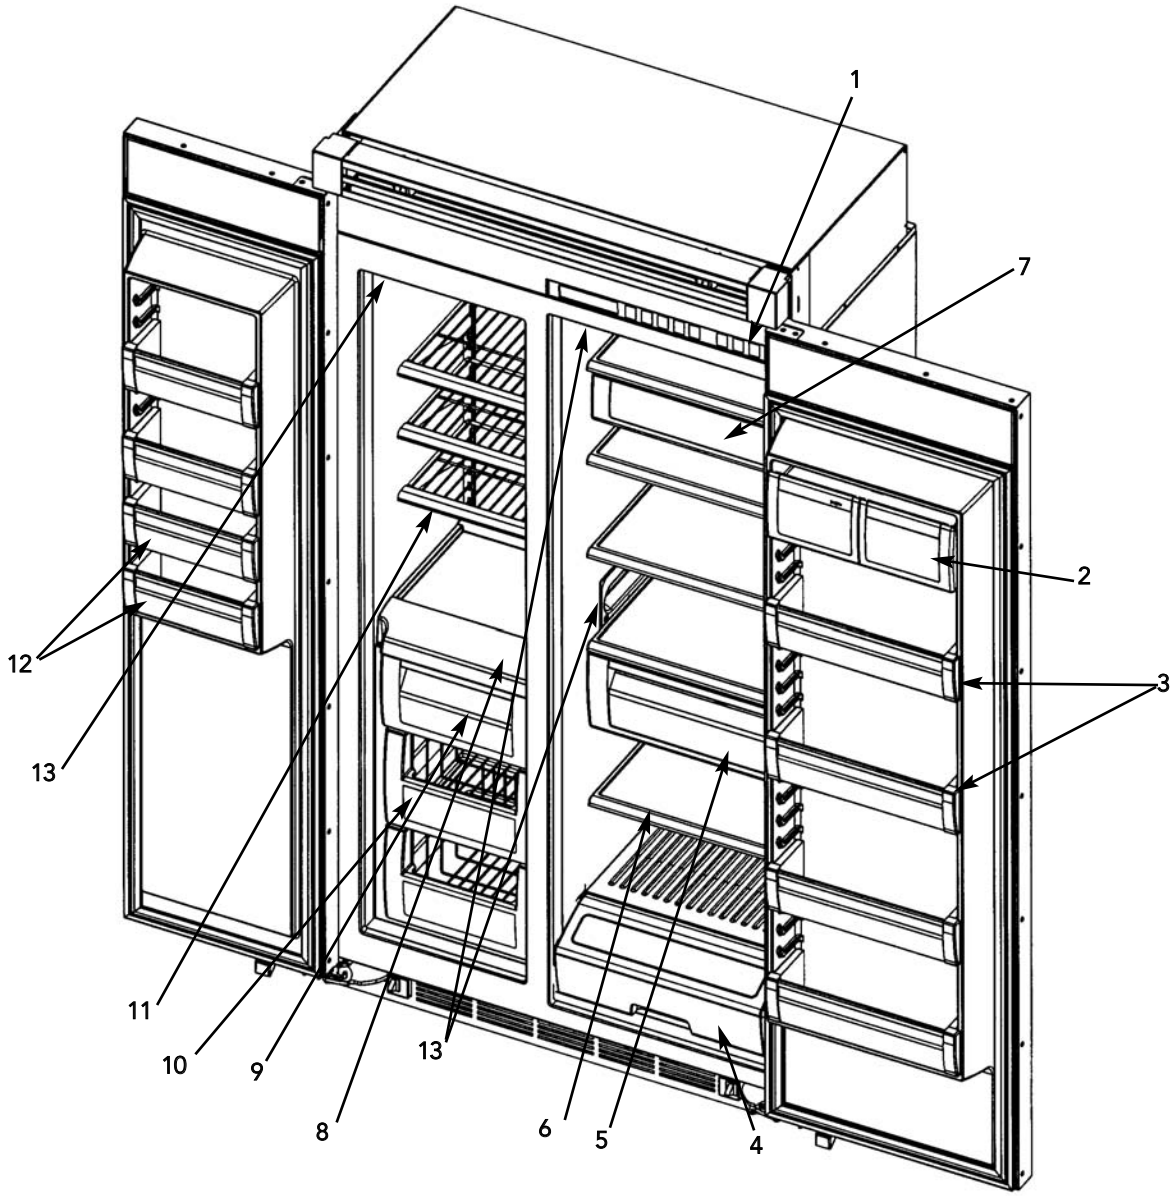

42″ W. Model Shown

FEATURES OF YOUR REFRIGERATOR (ICE AND WATER DISPENSER MODEL)

1. Electronic controls
2. Dairy compartments (2)
3. Adjustable door bins (4)
4. Meat Savor™/Produce Drawer (1)
5. Moisture-controlled produce drawer
   - 42″ W. models (1) full width
   - 48″ W. models (2) half width
6. Water filter
7. Deli Compartment drawer
   - 42″ W. models (1) full width
   - 48″ W. models (2) half width
8. Spillproof shelves (5)
9. Adjustable freezer shelves (3)
10. Non-adjusting freezer shelf (1)
11. Adjustable freezer door bins (4)
12. Glide-out frezzer baskets (2)
13. Ice and water dispenser (1)
14. Ice storage bucket (1)
15. Lights

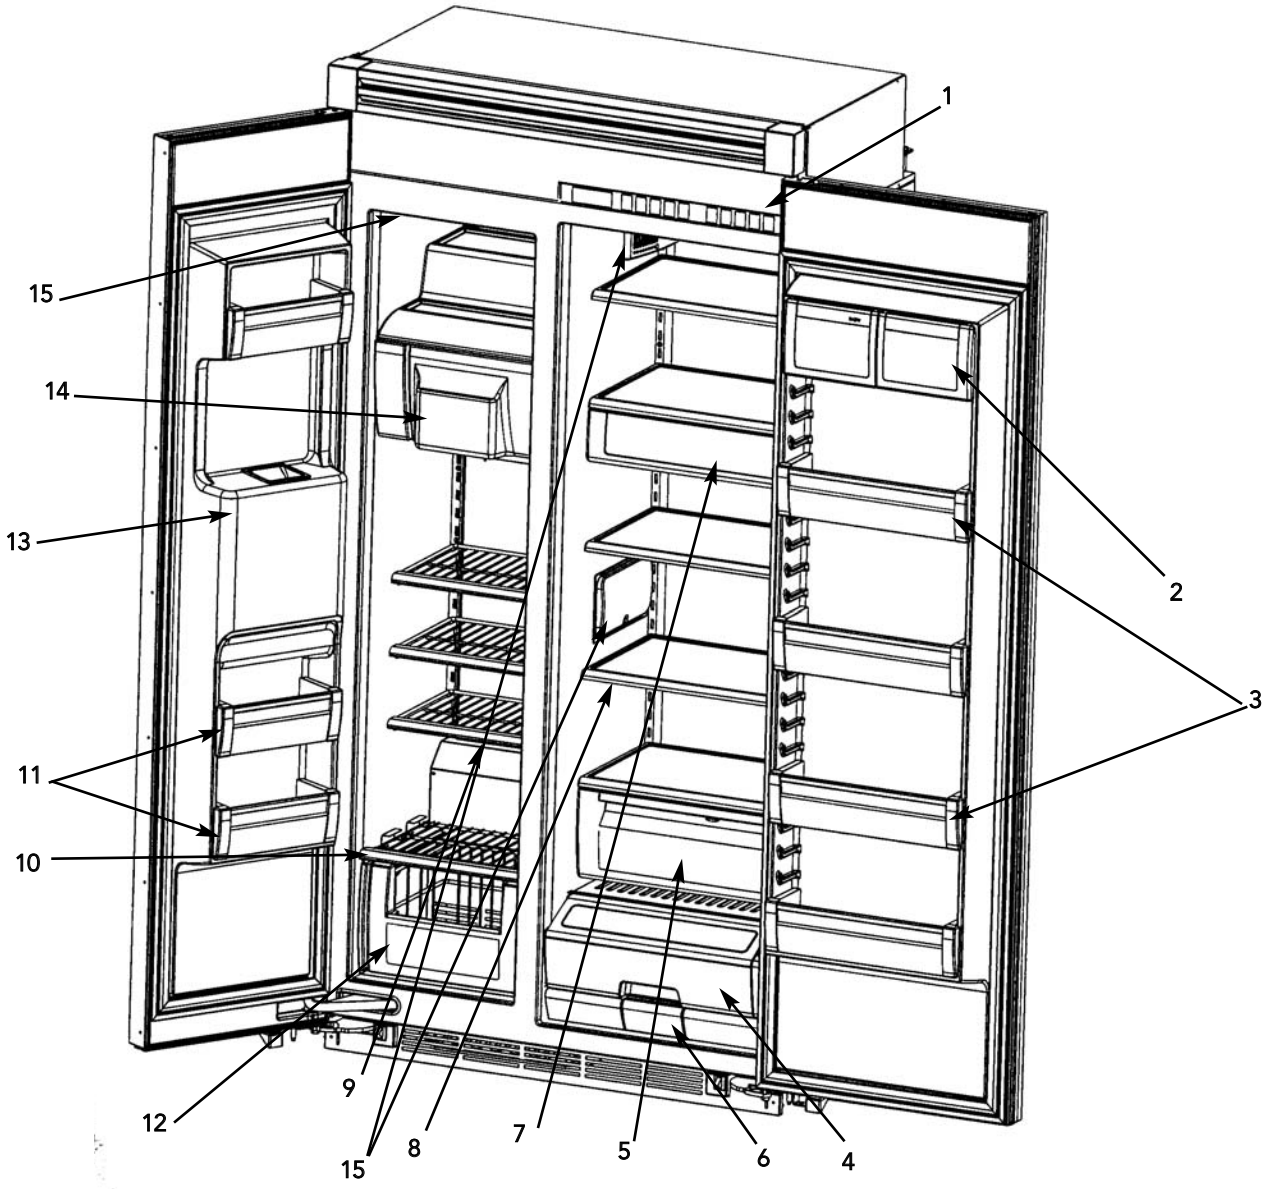

42″ W. Model Shown

SITE PREPARATIONS AND CONSIDERATIONS

PROFESSIONAL MODEL SIDE-BY-SIDE CABINET OPENING DIMENSIONS

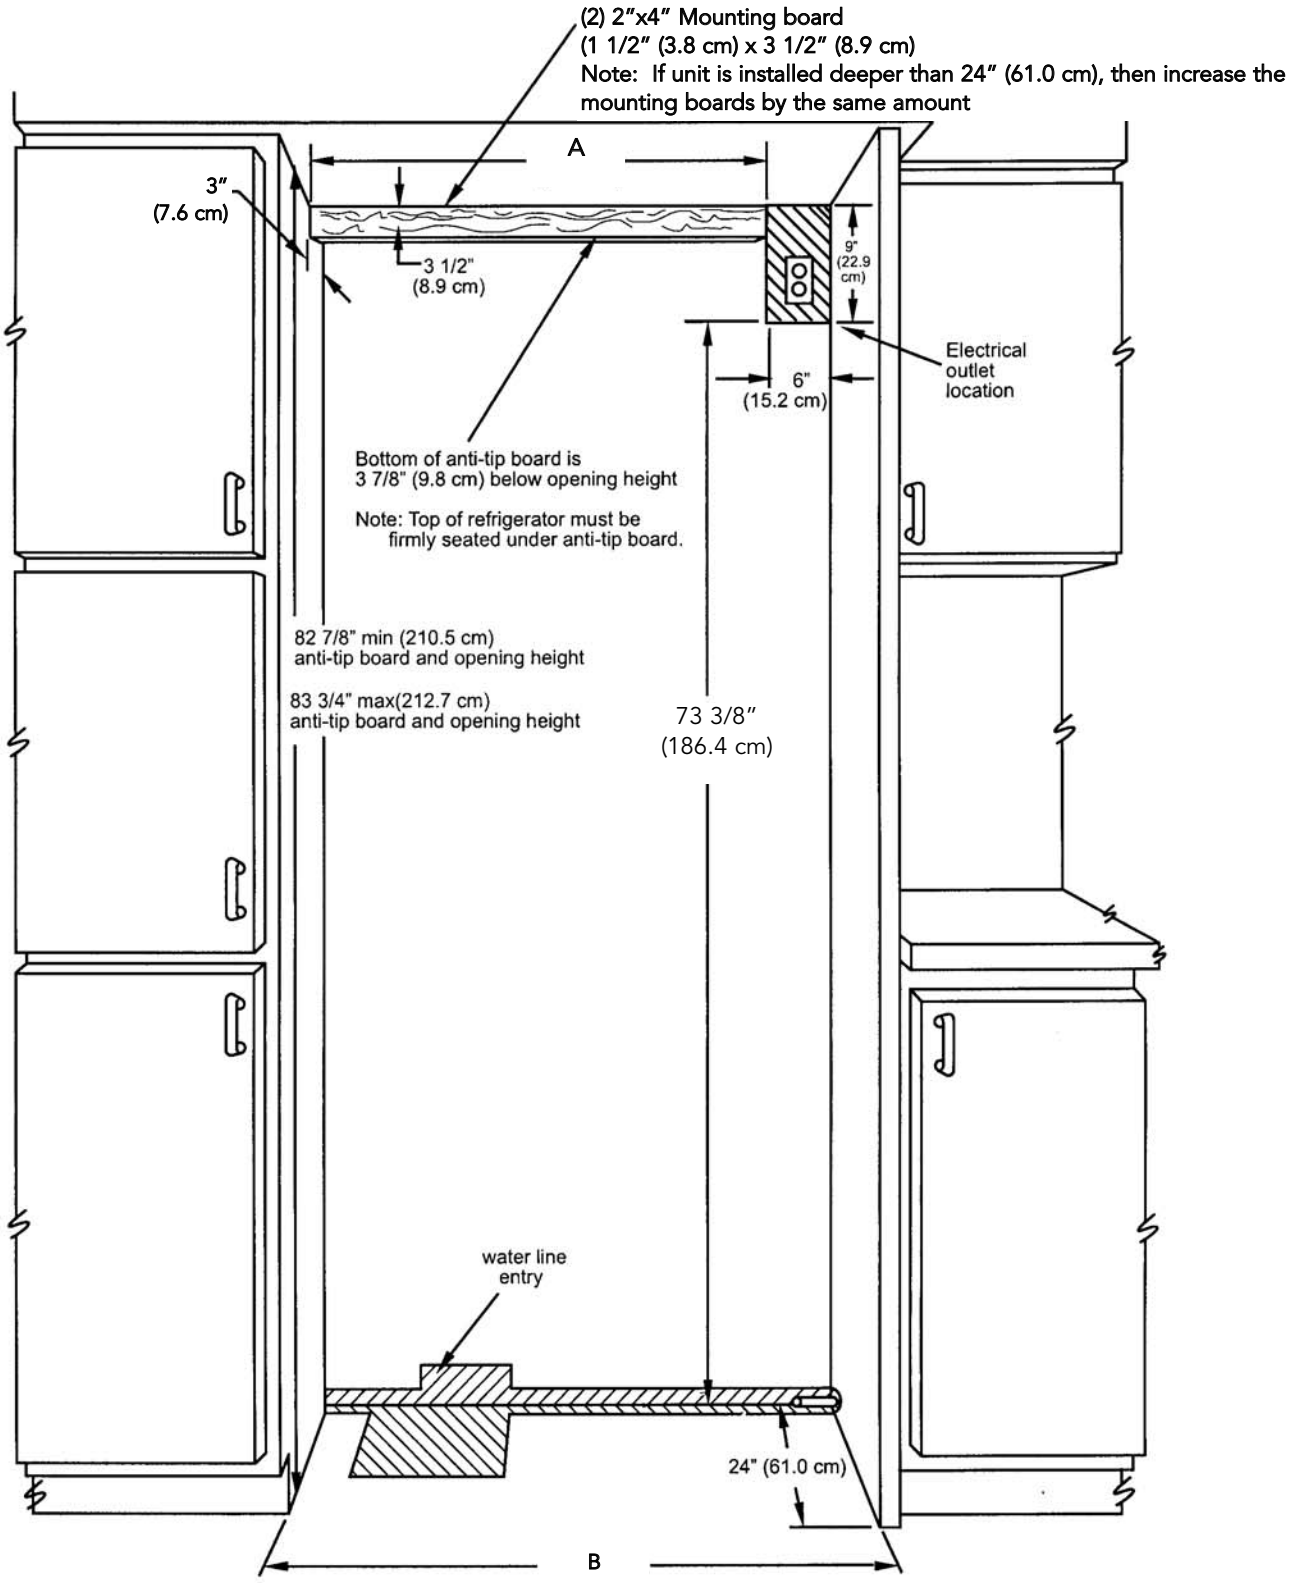

	A	B
42" W. Models	35" (88.9 cm)	41-1/2" (105.4 cm)
48" W. Models	41" (104.1 cm)	47-1/2" (120.7 cm)

SITE PREPARATIONS AND CONSIDERATIONS

DESIGNER/FULL OVERLAY MODEL SIDE-BY-SIDE CABINET OPENING DIMENSIONS

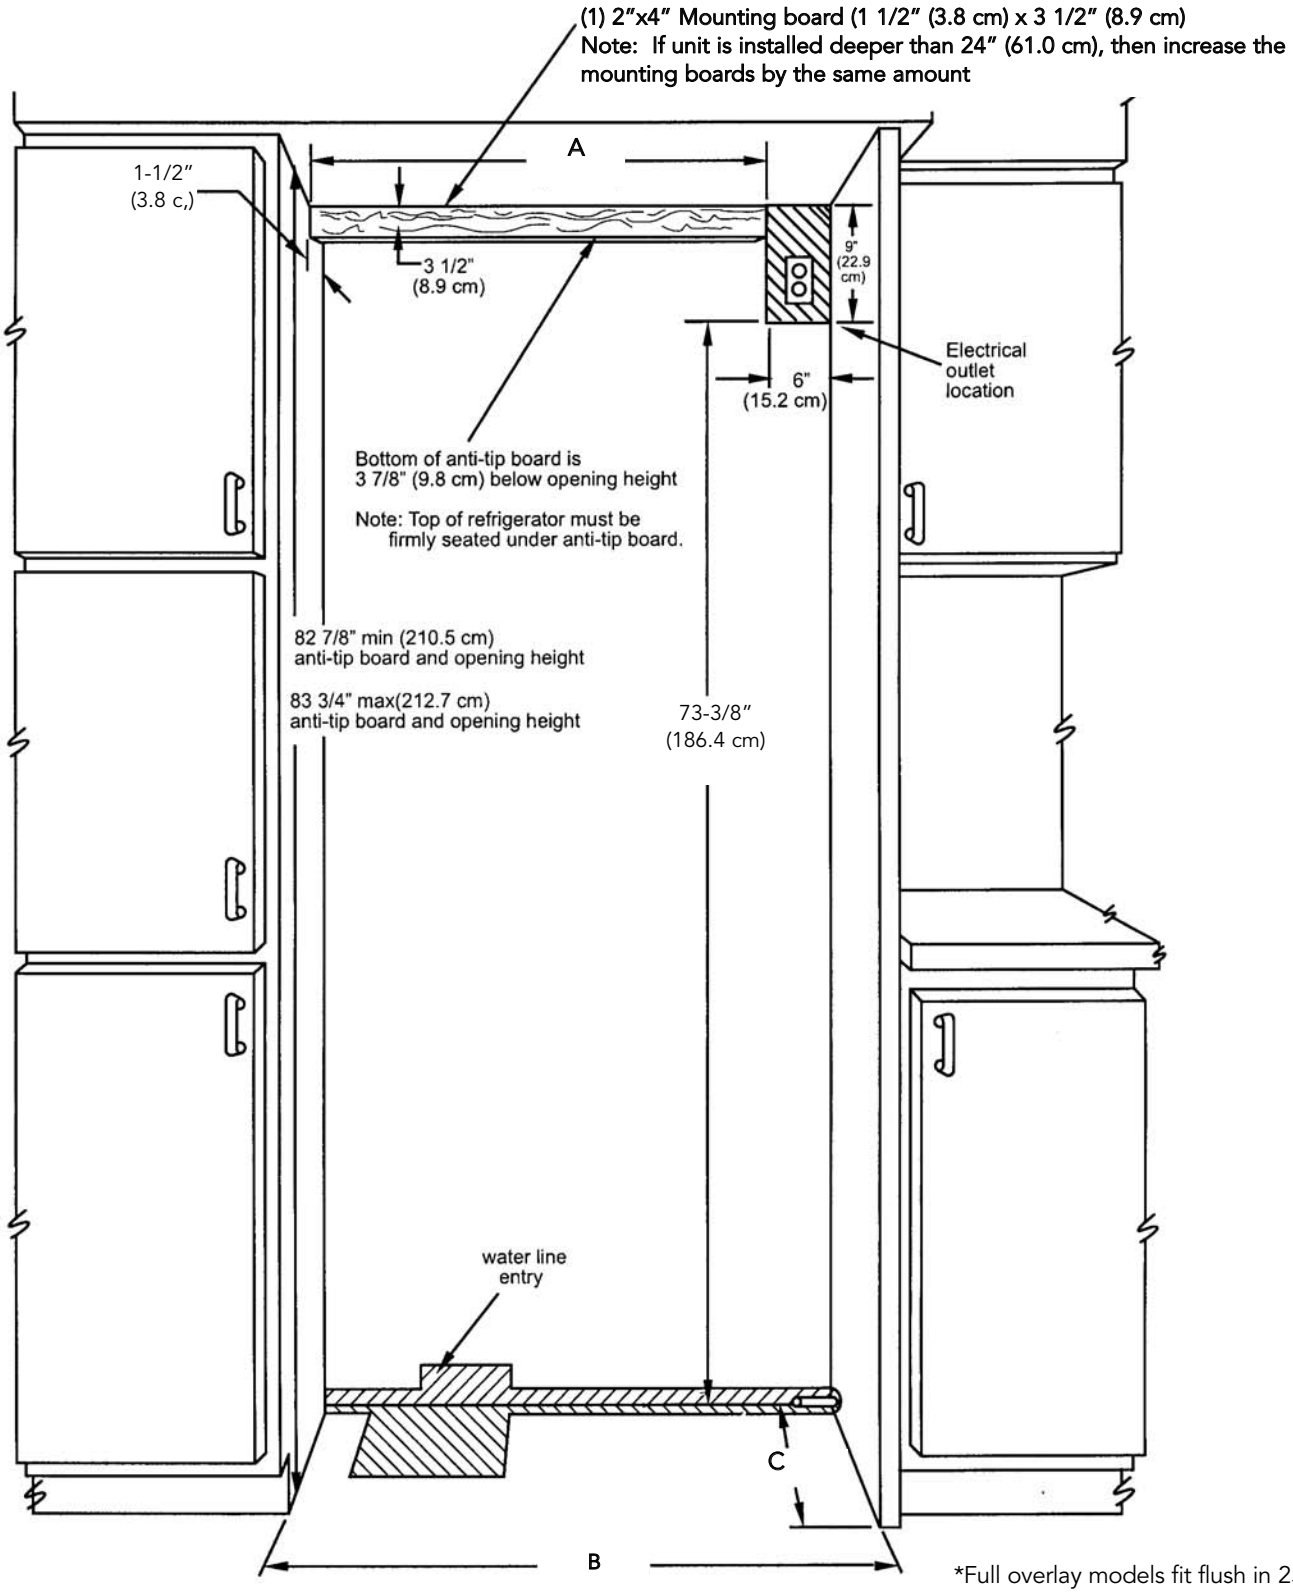

	A	B	C
42" W. Designer	35" (88.9 cm)	42" (106.7 cm)	24" (61.0 cm)
42" W. Full Overlay	35" (88.9 cm)	42" (106.7 cm)	25" (63.5 cm)
48" W. Designer	41" (104.1 cm)	48" (121.9 cm)	24" (61.0 cm)
48" W. Full Overlay	41" (104.1 cm)	48" (121.9 cm)	25" (63.5 cm)

*Full overlay models fit flush in 25" (63.5 cm) deep cabinet openings. They can be installed in standard 24" (61.0 cm) deep openings. The door faces and op grille will protrude 3/4" (1.9 cm) into the room.

WATER SUPPLY REQUIREMENTS

⚠ WARNING

ELECTRICAL SHOCK HAZARD
Some water may remain in line. Electric drill must be grounded to prevent severe or lethal shock if water is in line and enters drill during use.

Use only 1/4" (6 mm) copper tubing for water line. Do Not install copper tubing in area where temperatures drop below 35°F (1.7°C). Before attaching copper tubing to refrigerator, flush at least 2 quarts (1.9 L) of water through the copper tubing and into a bucket to remove any particles in the water line.

- **Viking Range Corporation is not responsible for property damage due to improper installation or water connection.**
- Connect 1/4" (6mm) flexible copper tubing to household plumbing in compliance with local codes and ordinances.
- Length of copper tubing must reach from water supply connection to refrigerator connection with an additional length to facilitate moving the refrigerator out of enclosure for cleaning or service. Tubing should be soft instead of rigid and ends should be free of burrs.
- Copper tubing route must be above 35°F (1.6°C) to prevent water line from freezing.
- **Do not use plastic water lines.**
- **Do not use the self-piercing feature of a saddle valve.** The hole made by the piercing lance is too small for the water flow rate required by the ice maker. To use a saddle valve, follow the instructions below located under "To rough in water line" on how to pre-drill a 3/16" diameter hole.
- If saddle valve is not used, place a separate shut-off valve in an easily accessible location between water supply and refrigerator. Do not locate shut-off valve behind refrigerator.
- **Do not use with reverse osmosis water filtration system**. This will void warranty.
- Connect a vertical or horizontal 1/2" (1.2 cm) to 1 1/4" (3.2 cm) COLD water line near refrigerator area.
- Run water line through the floor, back, or side wall. Tubing should lay flat on floor underneath refrigerator. Clamp tubing to wall or floor.
- Water pressure must be greater than 20 psi and less than 120 psi.

To rough in water line:

1. Turn OFF main water supply. Turn ON nearest faucet long enough to clear line of water.
2. **Vertical cold water line:** Use grounded electric drill or hand drill to drill 3/16" (4.5 mm) hole in an easily accessible location in water line.
   Horizontal cold water line: Use grounded electric drill or hand drill to drill 3/16" (4.5 mm) hole in the TOP of the water line. This will keep sediment from collecting in valve.
3. Position washer over hole in water line. Turn saddle valve handle clockwise to expose piercing lance a maximum of 3/16" (4.5 mm). Align piercing lance over hole in water line. Place both halves of saddle valve bracket against water line. Turn saddle valve handle clockwise until piercing lance enters hole in water line and is firmly seated. The saddle valve is now in the closed position. Tighten packing nut. Evenly and firmly tighten bracket screws so washer will make a water-tight connection. **Do not overtighten screws: copper tubing could be crushed.**

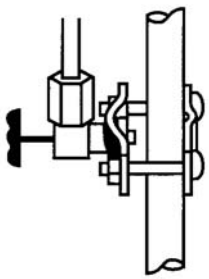

4. Check that both ends of copper tubing are cut square. Slide compression nut and sleeve onto copper tubing. Insert end of copper tubing completely into valve outlet. Tighten compression nut to outlet with adjustable wrench. **Do not overtighten.**
5. Turn on main water supply. Check for leaks. Turn saddle valve handle counterclockwise and run 2 quarts of water through copper tubing and into a bucket. Turn saddle valve clockwise to shut off water to copper tubing.
6. Route copper tubing to refrigerator area.
7. Leave an additional length of copper tubing coil to facilitate moving the refrigerator out of enclosure for cleaning or service.
8. See page 13 for water connection instructions.

Plumbing Dimensions

*NOTE: Must be under 1" (2.5 cm) from back wall

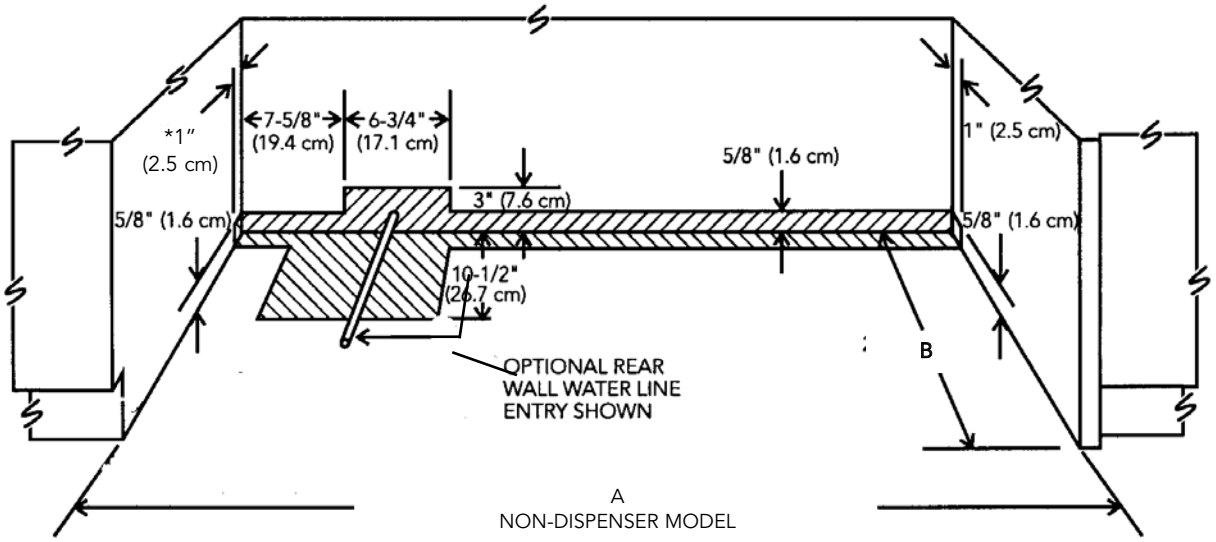

A
NON-DISPENSER MODEL

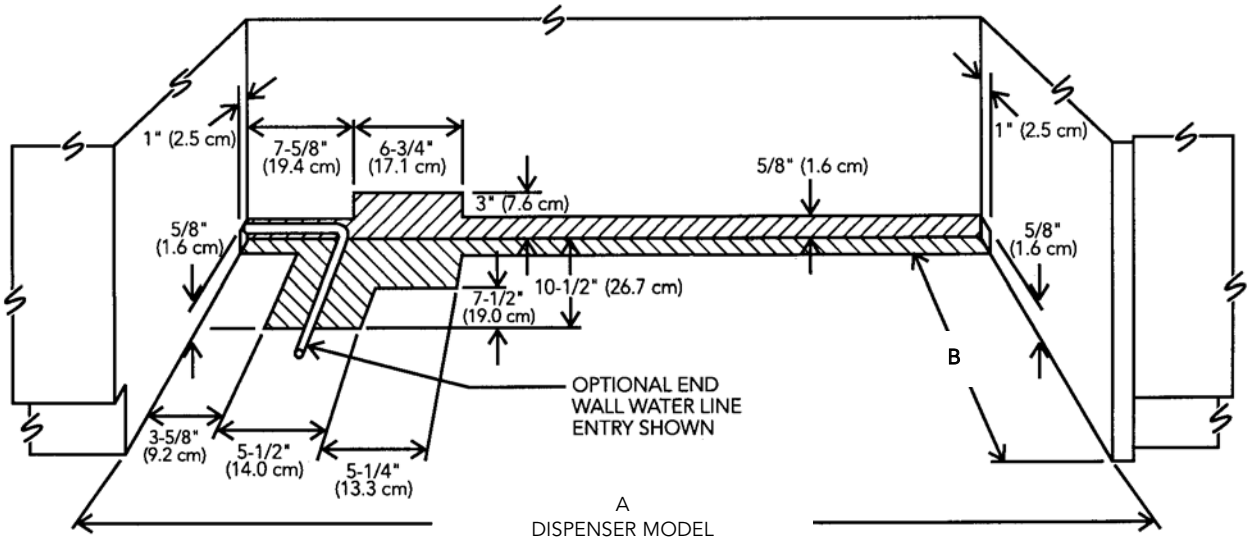

A
DISPENSER MODEL

	A	B
42" W. Professional	41-1/2" (105.4 cm)	24" (61.0 cm)
48" W. Professional	47-1/2" (120.7 cm)	24" (61.0 cm)
42" W. Designer	42" (106.7 cm)	24" (61.0 cm)
48" W. Designer	48" (121.9 cm)	24" (61.0 cm)
42" W. Full Overlay	42" (106.7 cm)	25" (63.5 cm)
48" Full Overlay	48" (121.9 cm)	25" (63.5 cm)

AREA REQUIREMENTS

Verify the following:

- Refrigerator can fit into residence and can be moved around corners and through doorways.
- Floors can support refrigerator's weight plus food weight (approximately 1200 pounds total).
- Rear wall is solid and is able to support two (2) horizontally mounted 2X4s (included) bolted to 2 wall studs. The 2X4 board bolt heads must be flush with 2X4 to prevent obstruction.
- Remove anything attached to rear or side walls that can obstruct refrigerator installation.
- Cutout dimensions are accurate.
- Electrical outlet is in correct location.
- Water line is in correct location.

ELECTRICAL REQUIREMENTS

⚠ WARNING

ELECTRICAL SHOCK HAZARD

Plug into a grounded 3-prong outlet.
DO NOT remove ground plug.
DO NOT use an adapter.
DO NOT use an extension cord.
Failure to follow these instructions could result in fire or electrical shock.

If codes permit a separate grounding wire to be used, it is recommended that a qualified electrician determine that the grounding path is adequate. Do Not ground to a gas pipe. Check with a qualified electrician if you are not sure the appliance is properly grounded. Do Not have a fuse in the neutral or grounding circuit.

It is the customer's responsibility to:

- contact a qualified electrical installer.
- assure that the electrical installation is adequate and in conformance with the National Electrical Code, ANSI/NFPA 70-latest edition or Canadian Electrical Code C22.1-1998 and C22.2 No. 0-M91 (or latest edition), and all local codes and ordinances. (115 volt, 60-Hz, 15 amp, fused, electrical supply is required. It is required that a separate circuit serving only this appliance be provided. This appliance is equipped with a power supply cord having a 3-prong grounding plug. To minimize possible shock hazard, the cord must be plugged into a mating 3-prong, grounding-type wall receptacle. **Do not use an extension cord.)**

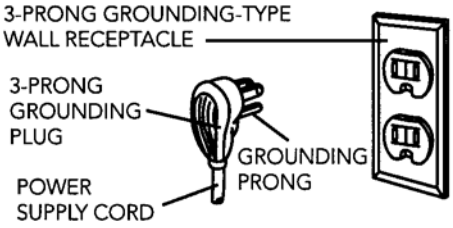

Anti-Tip Requirements

The anti-tip boards should be fastened into position prior to moving the unit into the opening.

Note: Additional mounting boards may be required if the refrigerator does not touch the back wall of the enclosure. To prevent refrigerator from tipping forward, it must be secured in place with a solid soffit or wood block.

⚠ WARNING

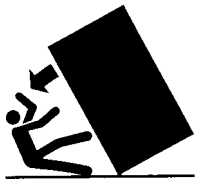

TIP OVER HAZARD

Refrigerator is top heavy and tips easily when not completely installed.
Keep doors closed until refrigerator is completely installed and secured per installation instructions.
Use two or more people to move and install refrigerator. Failure to do so can result in death or serious injury.

DOOR SWING AND TIPPING CONSIDERATIONS
42" W. PROFESSIONAL MODEL

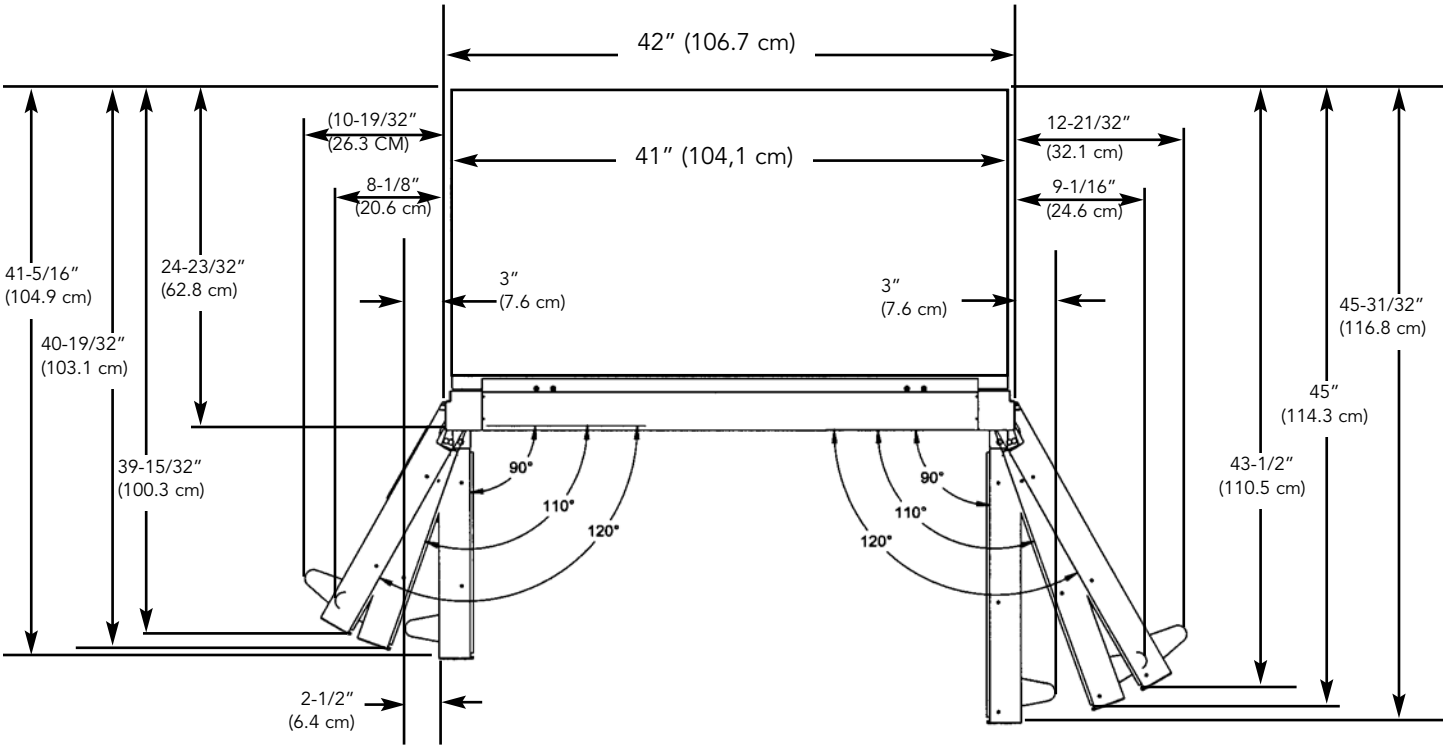

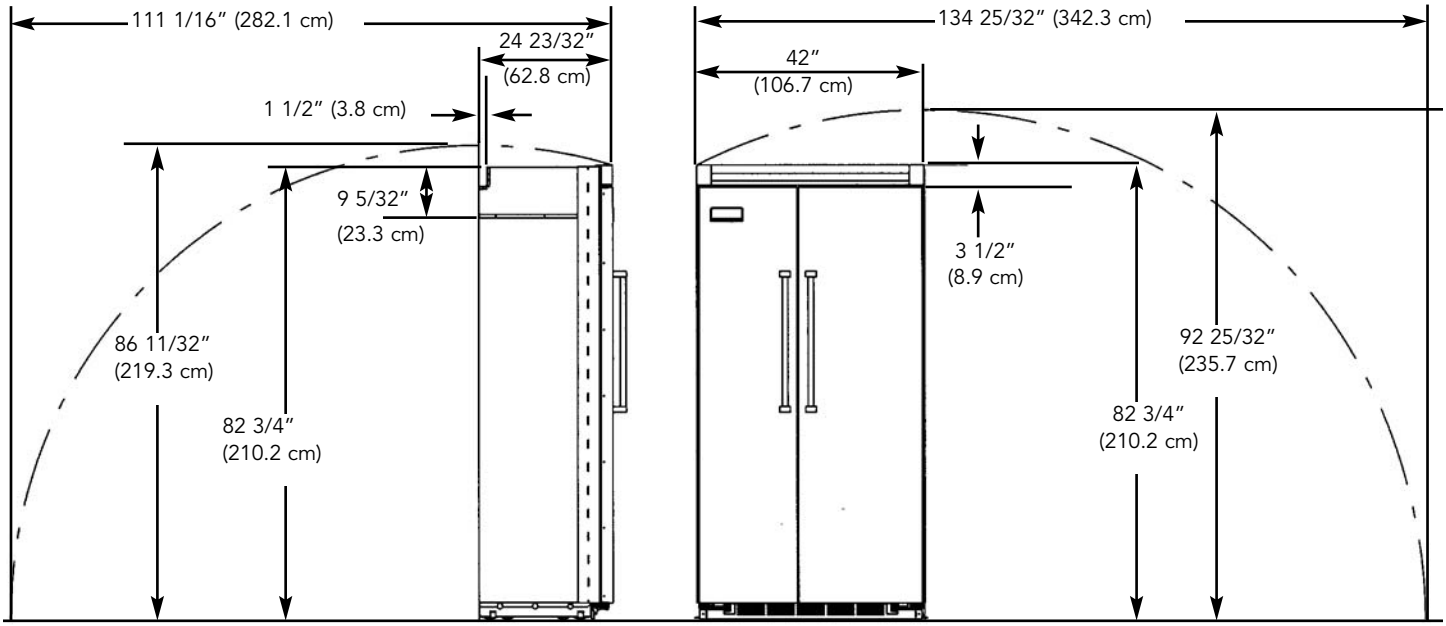

DOOR SWING AND TIPPING CONSIDERATIONS

48" W. PROFESSIONAL MODEL

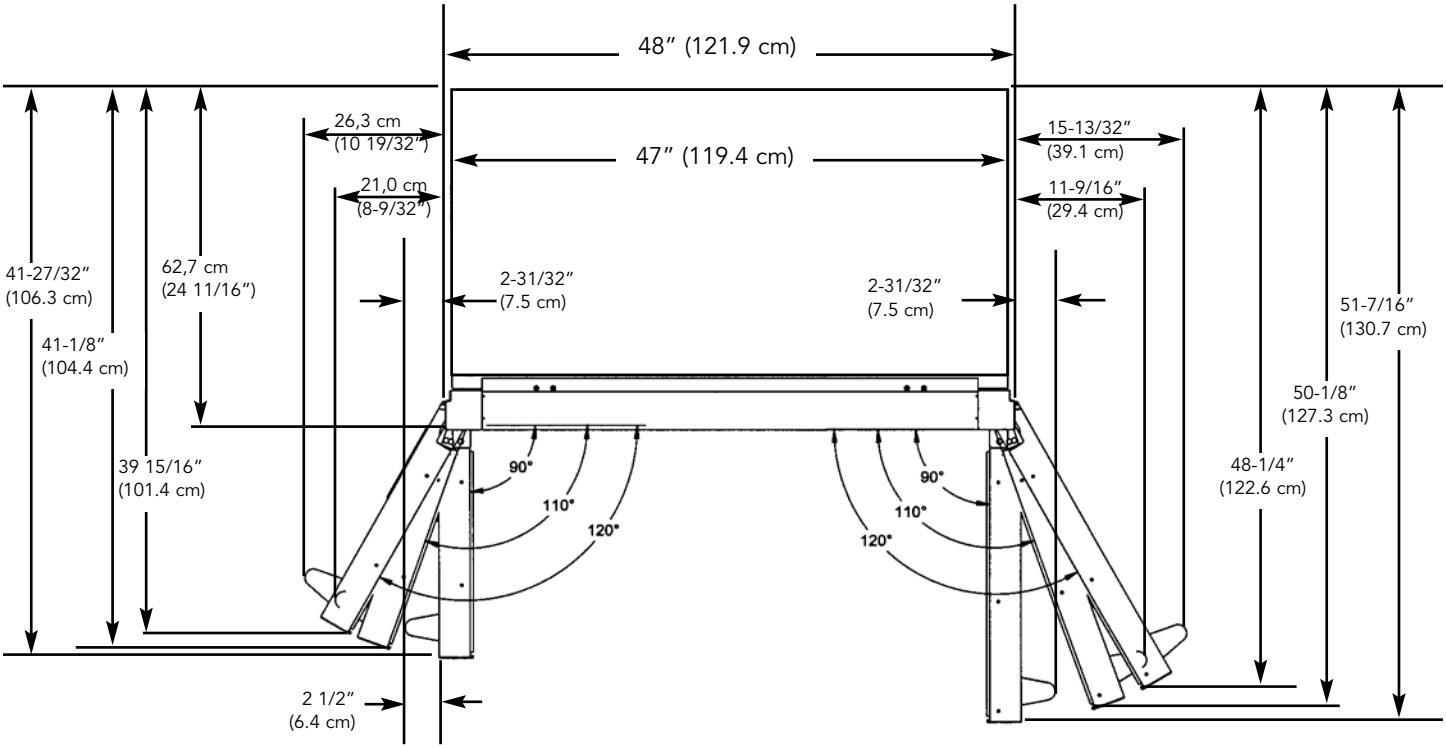

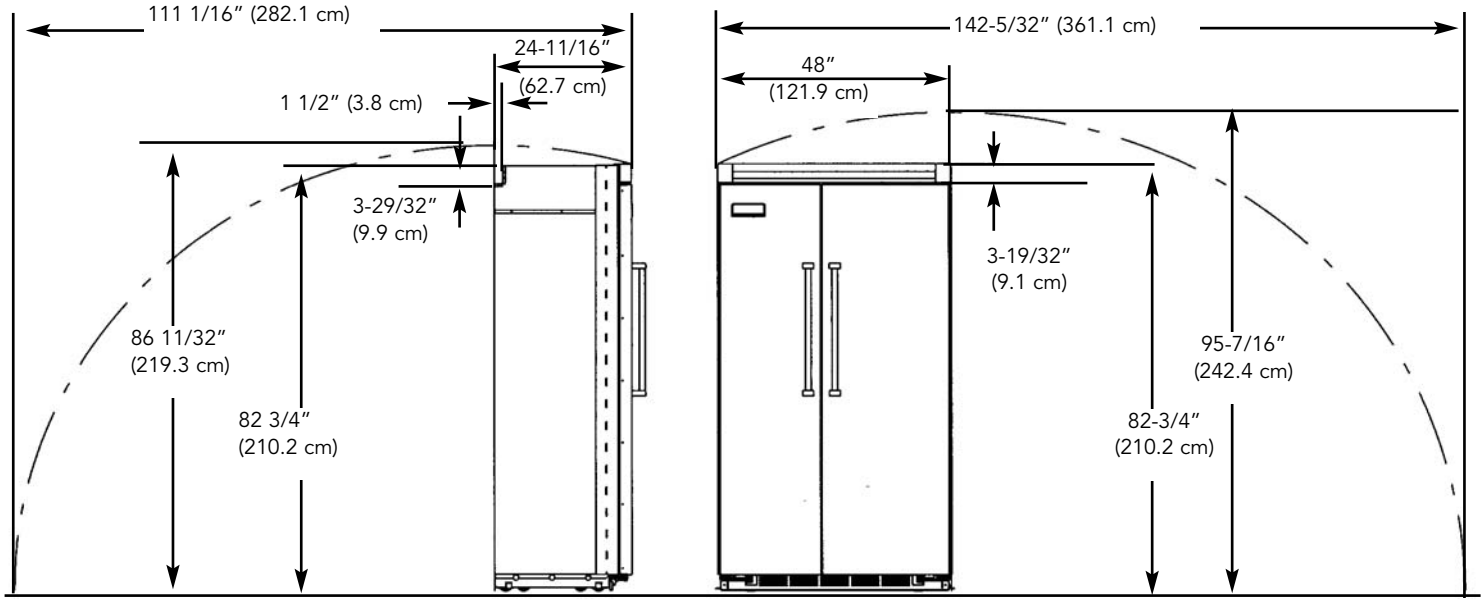

DOOR SWING - 42" W. DESIGNER MODEL

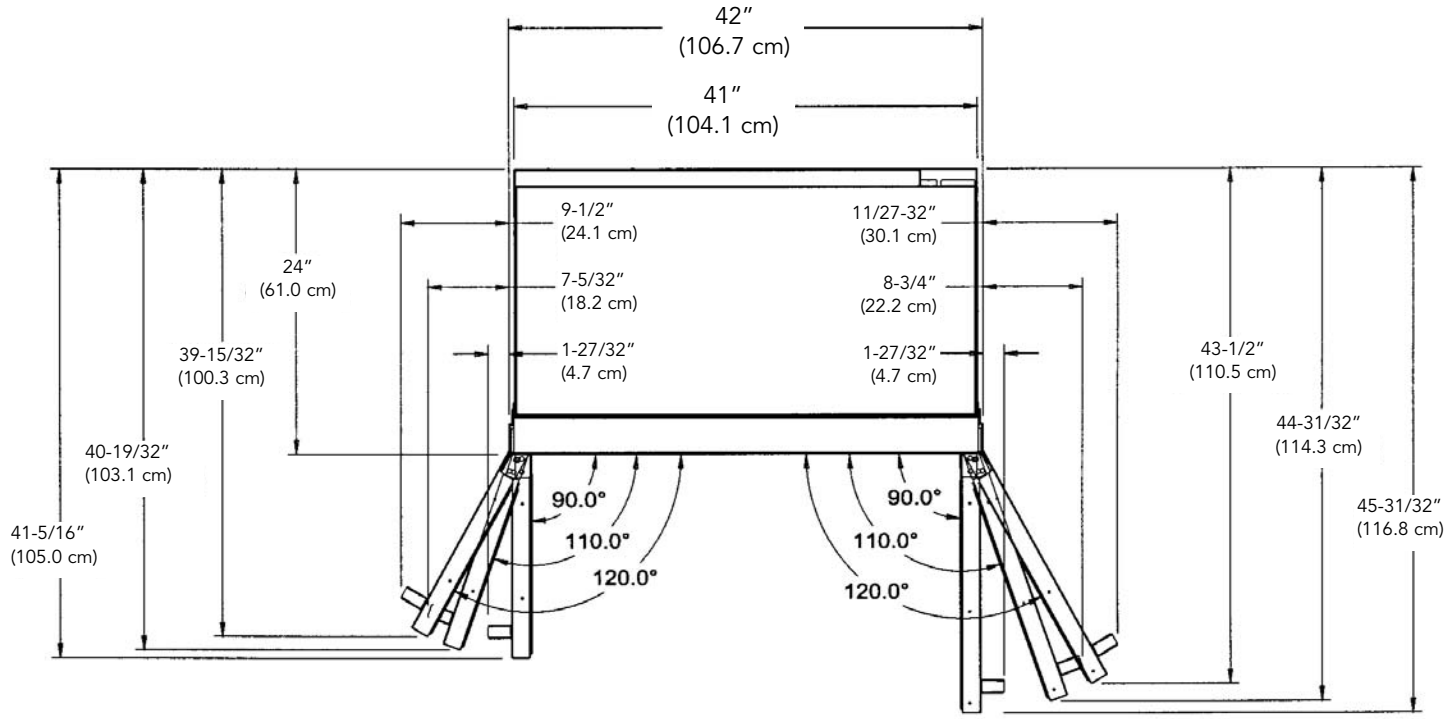

DOOR SWING - 42" W. FULL OVERLAY MODEL

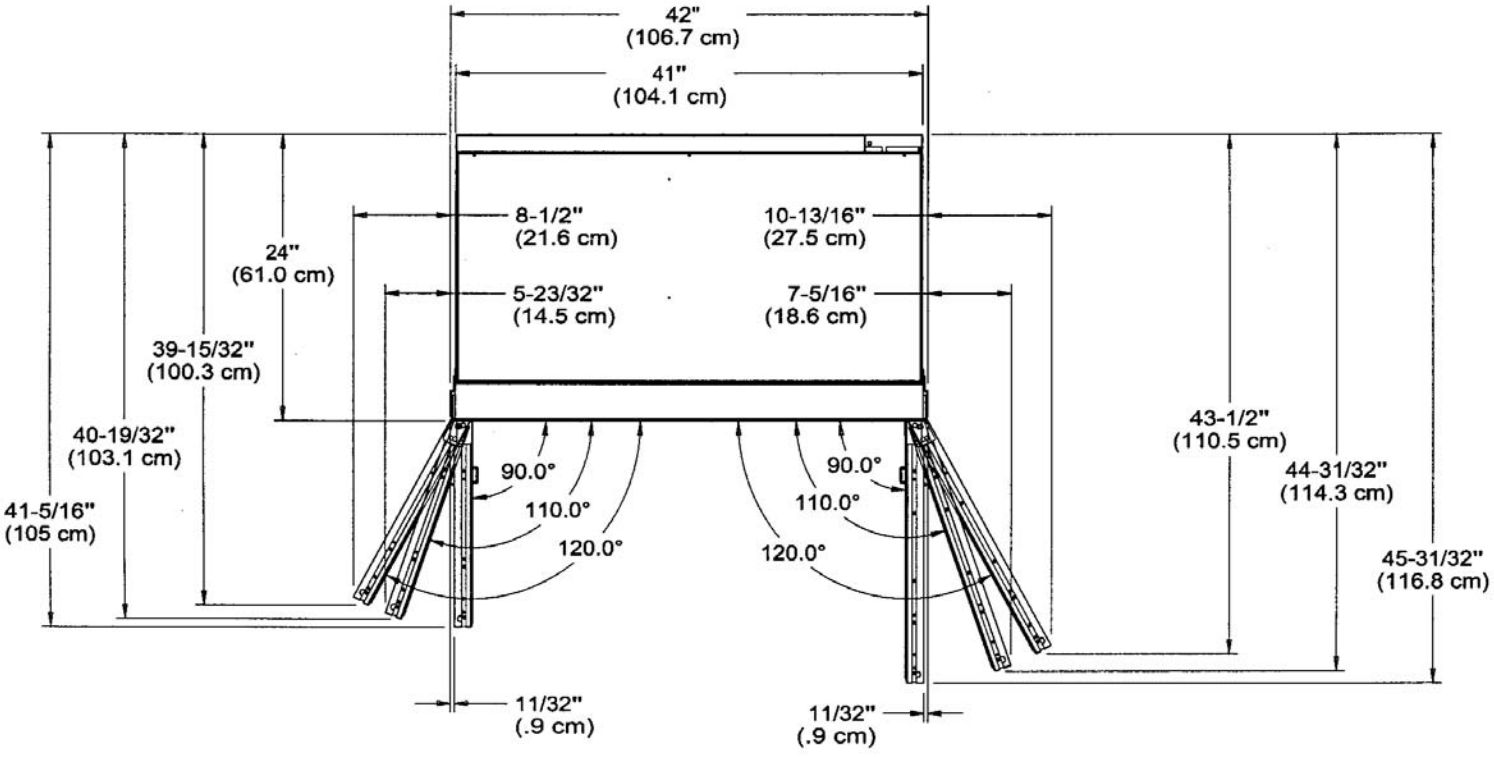

DOOR SWING - 48" W. DESIGNER MODEL

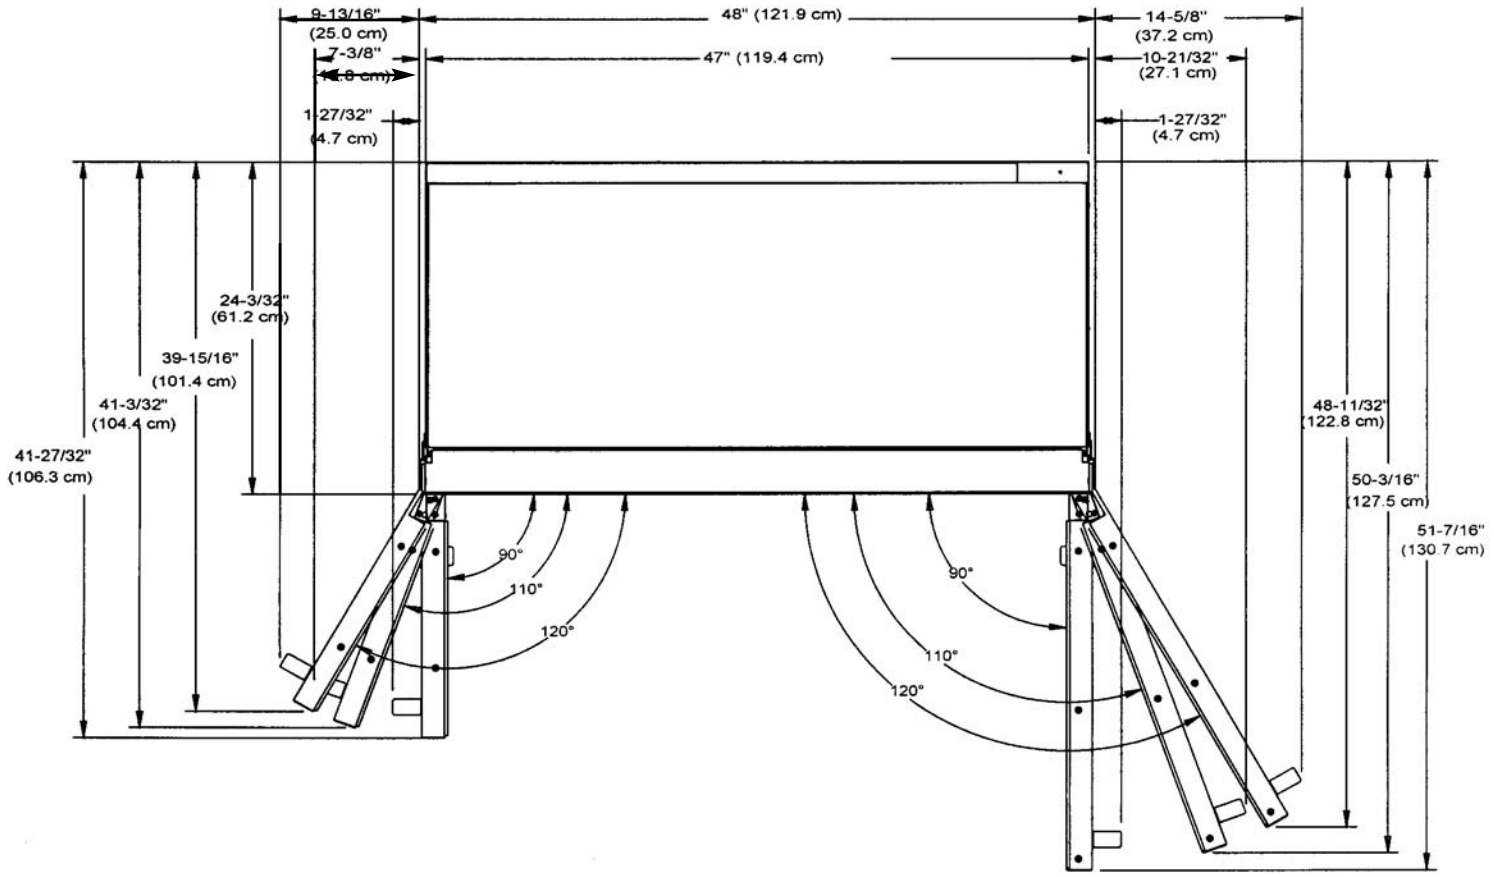

DOOR SWING - 48" W. FULL OVERLAY MODEL

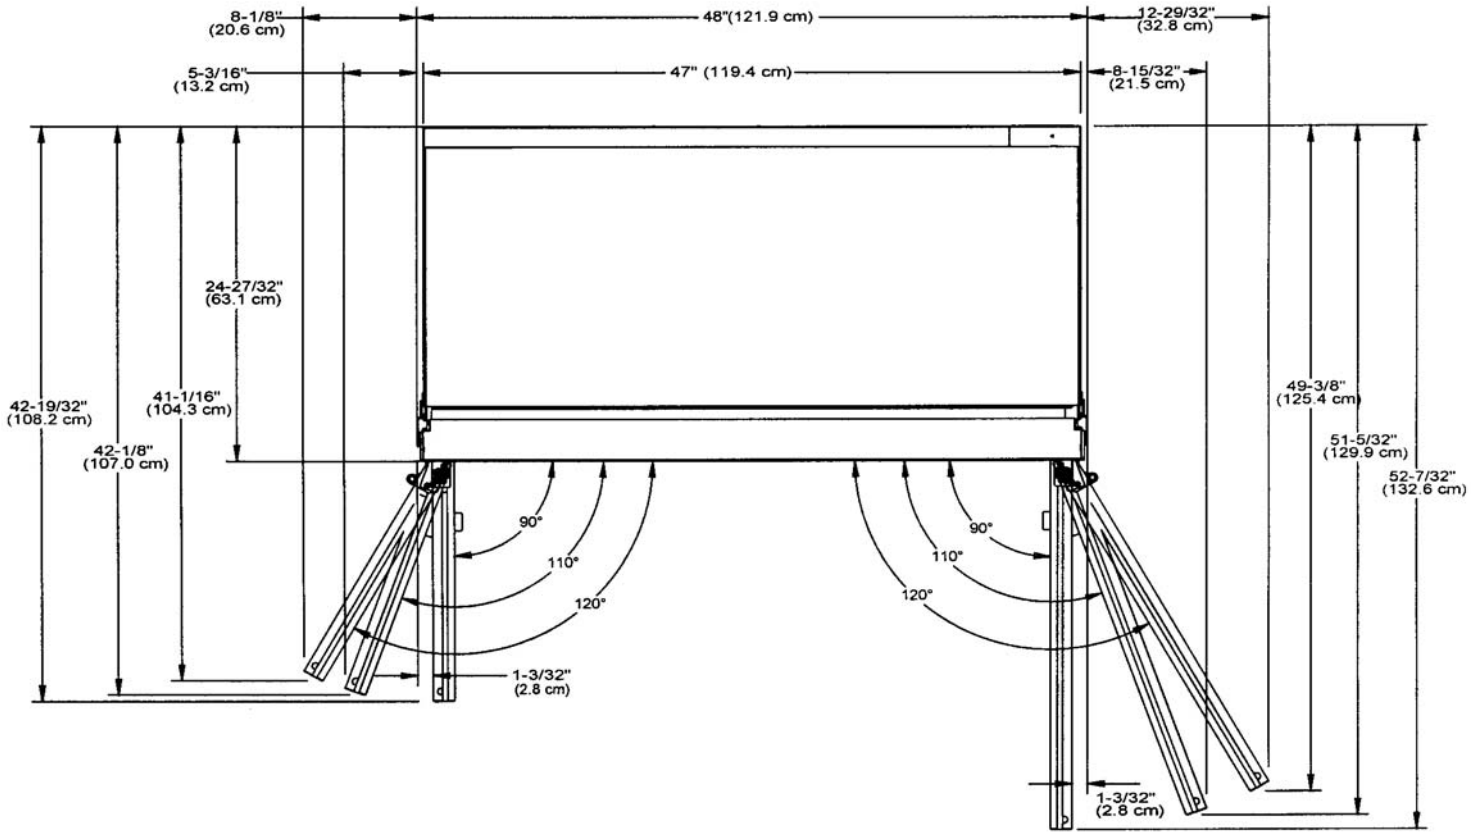

TIPPING CONSIDERATIONS
42" W. DESIGNER AND FULL OVERLAY MODELS

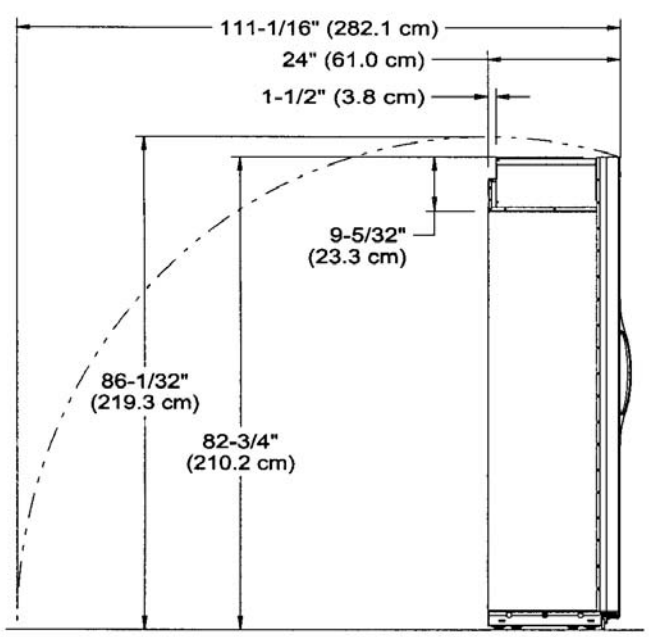

42" (106.7 cm) BACKWARD TIPPING RADIUS

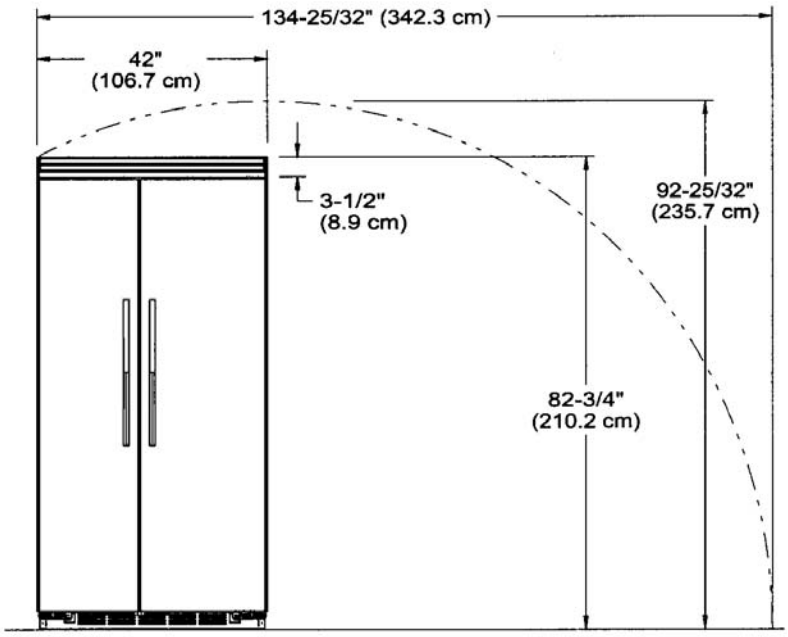

42" (106.7 cm) SIDE TIPPING RADIUS

TIPPING CONSIDERATIONS
48" W. DESIGNER AND FULL OVERLAY MODELS

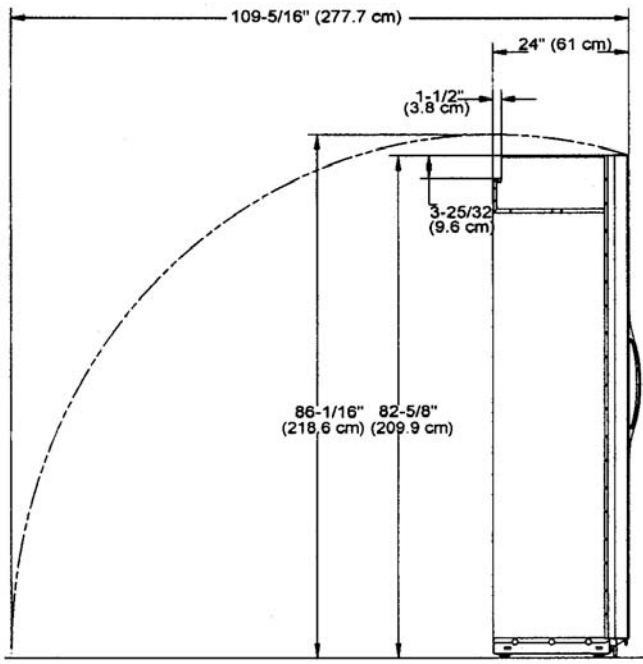

48" (121.9 cm) BACKWARD TIPPING RADIUS

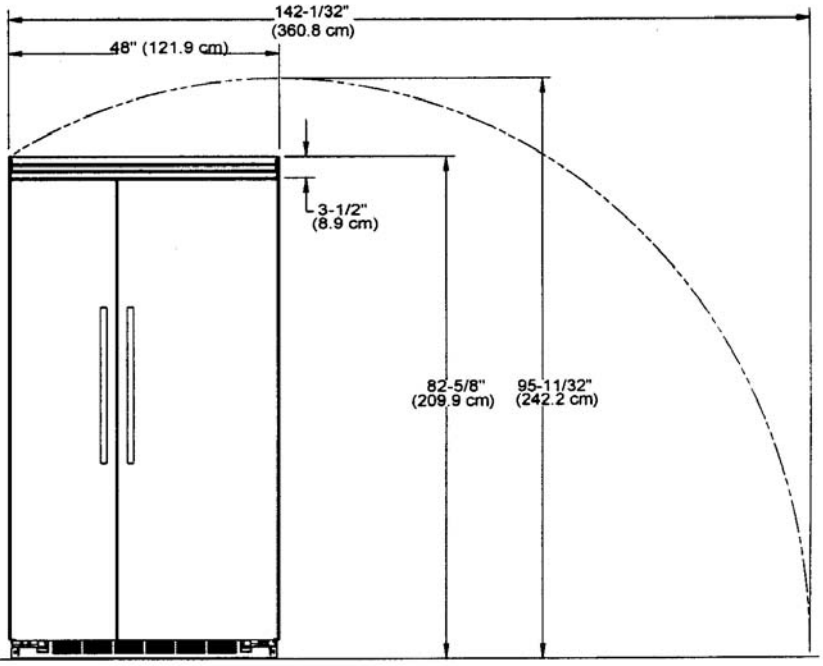

48" (121.9 cm) SIDE TIPPING RADIUS

SIDE-BY-SIDE REFRIGERATOR OVERALL DIMENSIONS
PROFESSIONAL MODEL

TOP

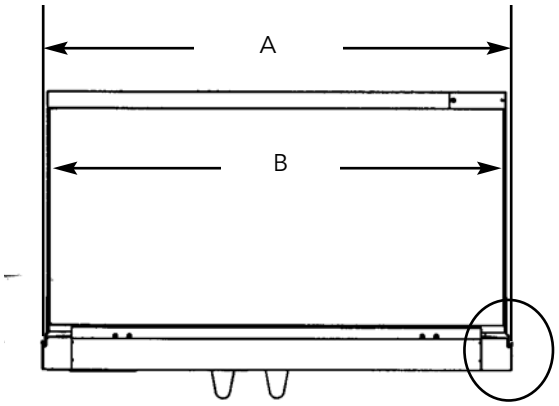

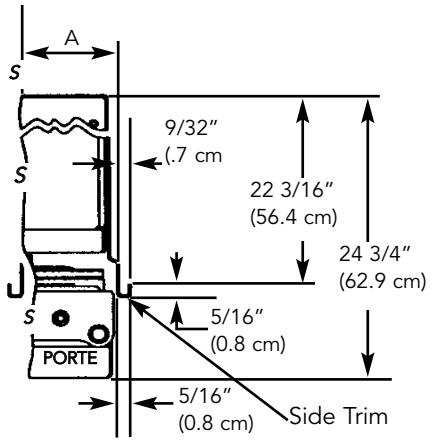

FRONT

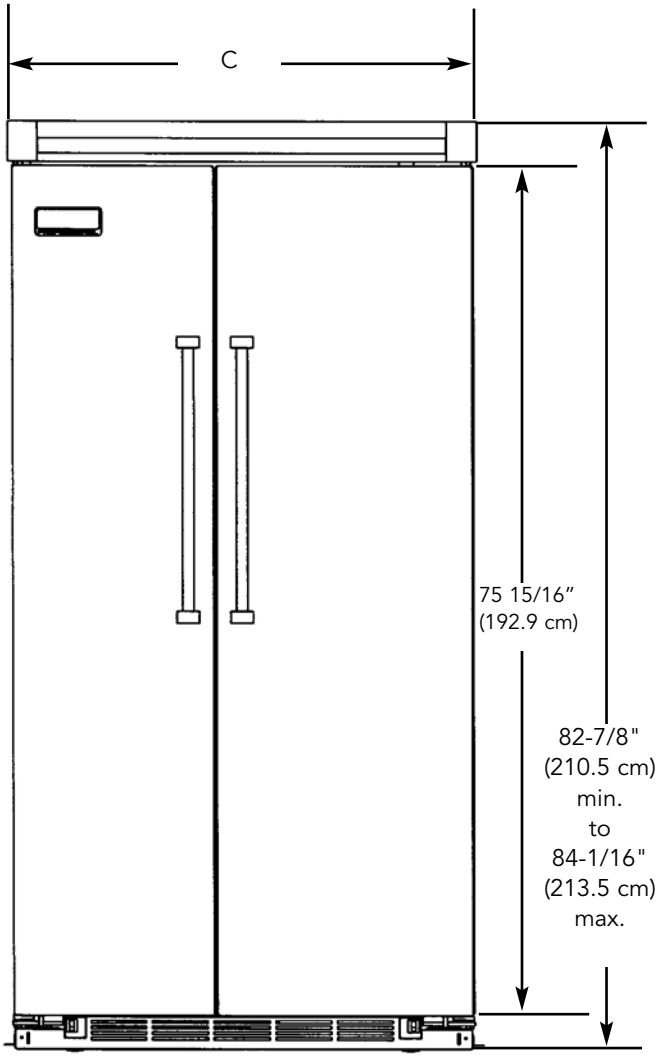

SIDE

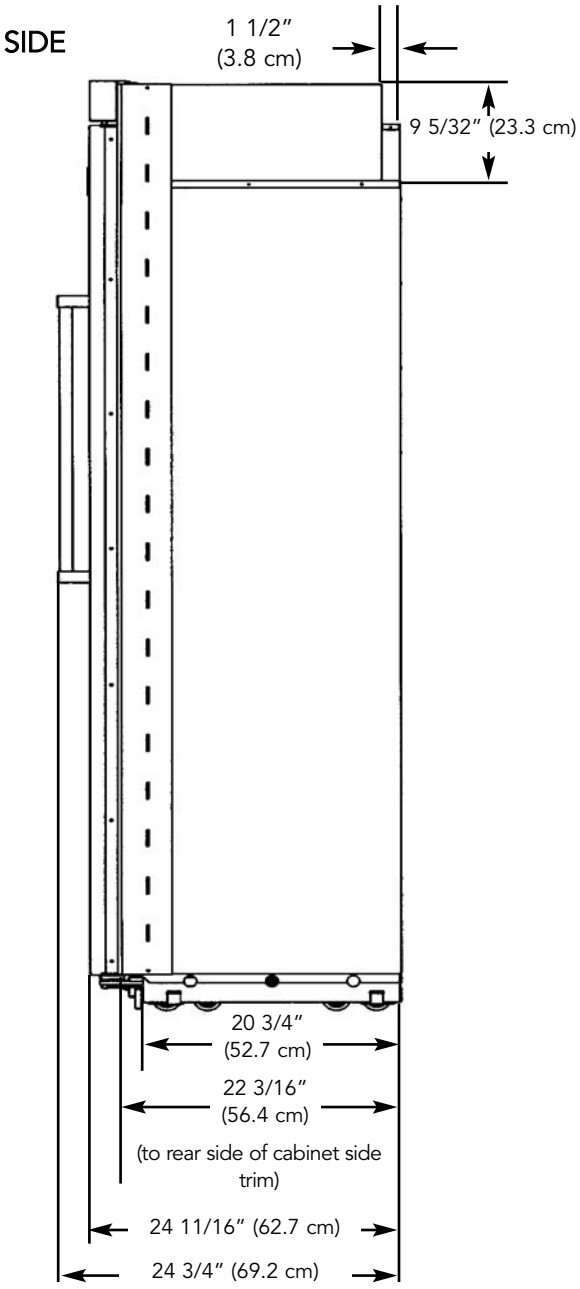

	A	B	C
42" W	41-1/2"(105.4 cm)	41"(104.1 cm)	42" (1067 cm)
48" W	47-1/2"(120.7 cm)	47" (119.4 cm)	48"(121.9 cm)

CABINET INFORMATION - PROFESSIONAL MODELS

Professional models fit "semi-flush" in standard 24" (61.0 cm) deep cabinet openings. The door face protrudes 2-1/2" (6.4 cm) from the cabinet face. The handle protrudes an additional 2-1/2" (6.7 cm) into the room

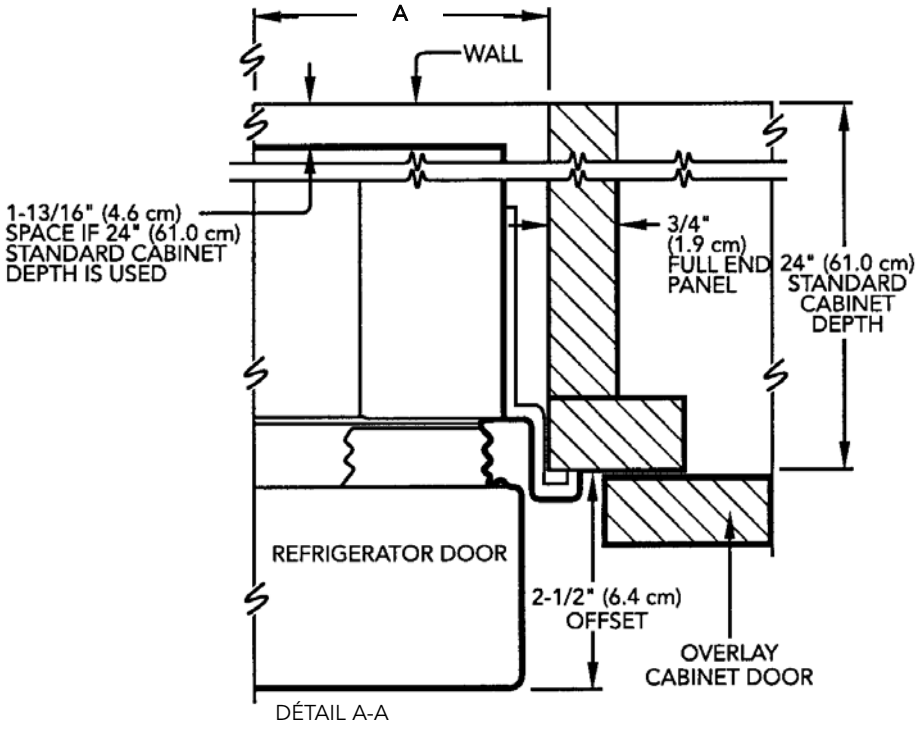

DÉTAIL A-A

	A
42" W	41-1/2" (105.4 cm))
48" W	47-1/2" (120.7 cm)

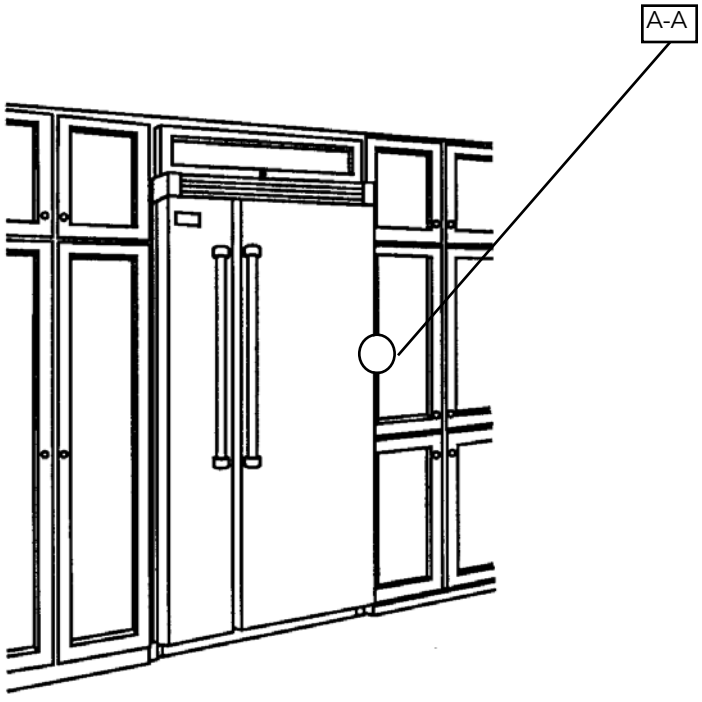

CUSTOM SIDE PANEL DIMENSIONS - PROFESSIONAL MODELS

FOR 3/4" 1.9 cm) SIDE PANELS

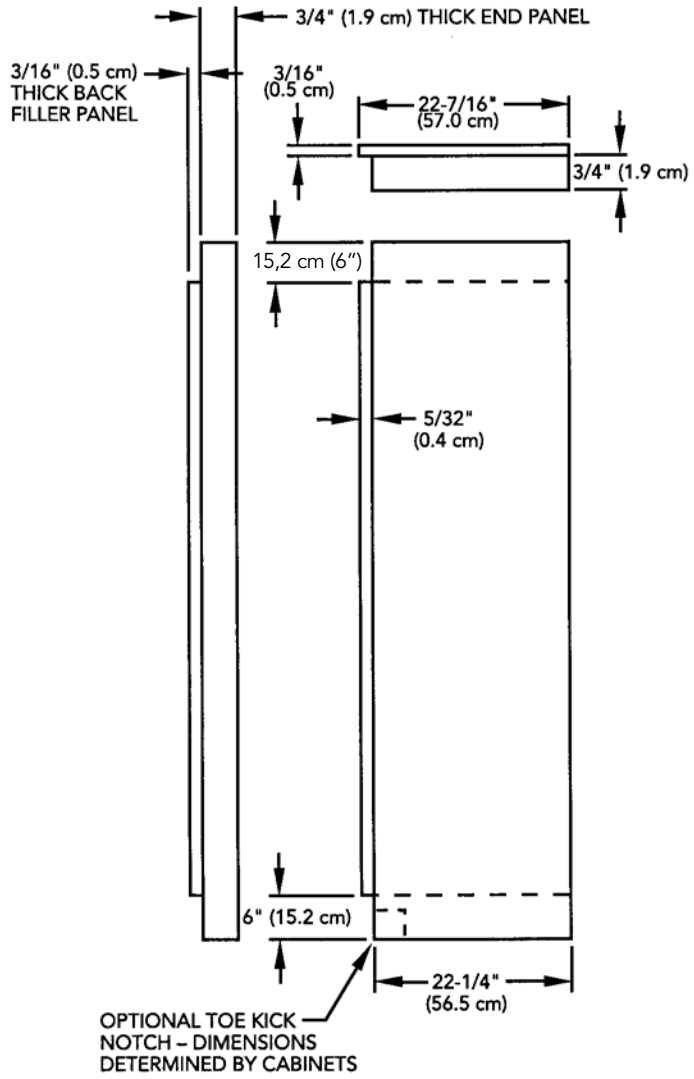
3/4" (1.9 cm) THICK END PANEL
3/16" (0.5 cm) THICK BACK FILLER PANEL
3/16" (0.5 cm)
22-7/16" (57.0 cm)
3/4" (1.9 cm)
15,2 cm (6")
5/32" (0.4 cm)
6" (15.2 cm)
22-1/4" (56.5 cm)
OPTIONAL TOE KICK NOTCH – DIMENSIONS DETERMINED BY CABINETS

RIGHT SIDE PANEL

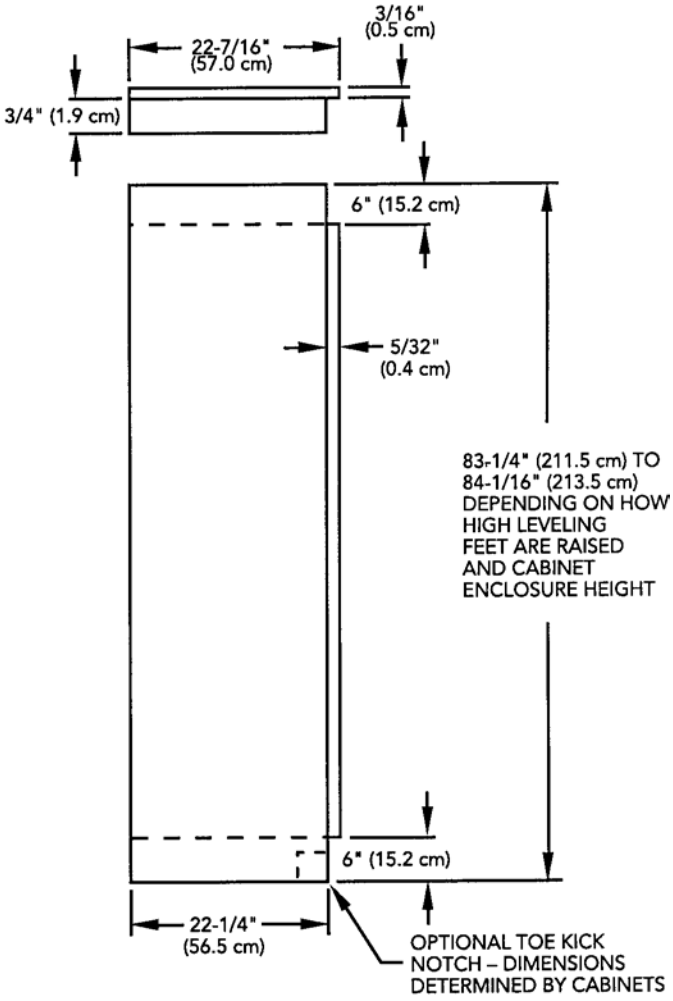
3/16" (0.5 cm)
22-7/16" (57.0 cm)
3/4" (1.9 cm)
6" (15.2 cm)
5/32" (0.4 cm)
83-1/4" (211.5 cm) TO 84-1/16" (213.5 cm) DEPENDING ON HOW HIGH LEVELING FEET ARE RAISED AND CABINET ENCLOSURE HEIGHT
6" (15.2 cm)
22-1/4" (56.5 cm)
OPTIONAL TOE KICK NOTCH – DIMENSIONS DETERMINED BY CABINETS

LEFT SIDE PANEL

SIDE-BY-SIDE REFRIGERATOR OVERALL DIMENSIONS - DESIGNER MODELS

TOP

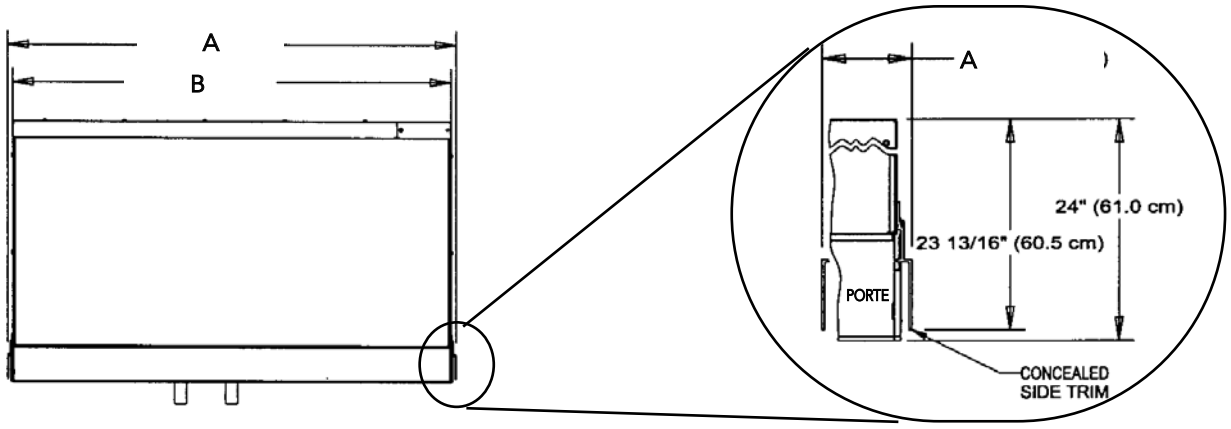

FRONT

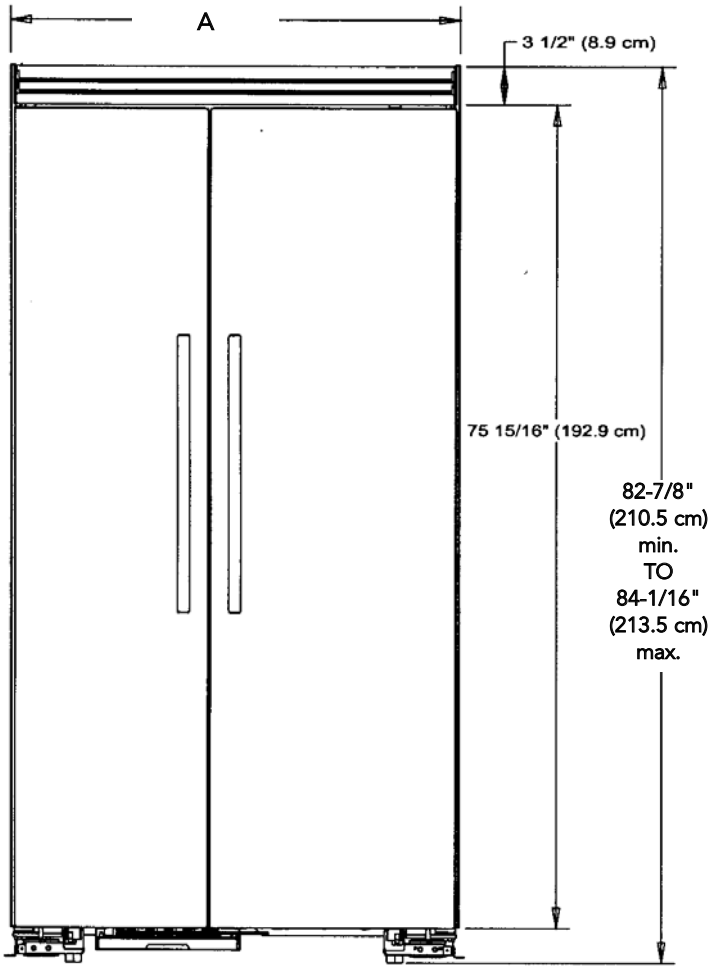

SIDE

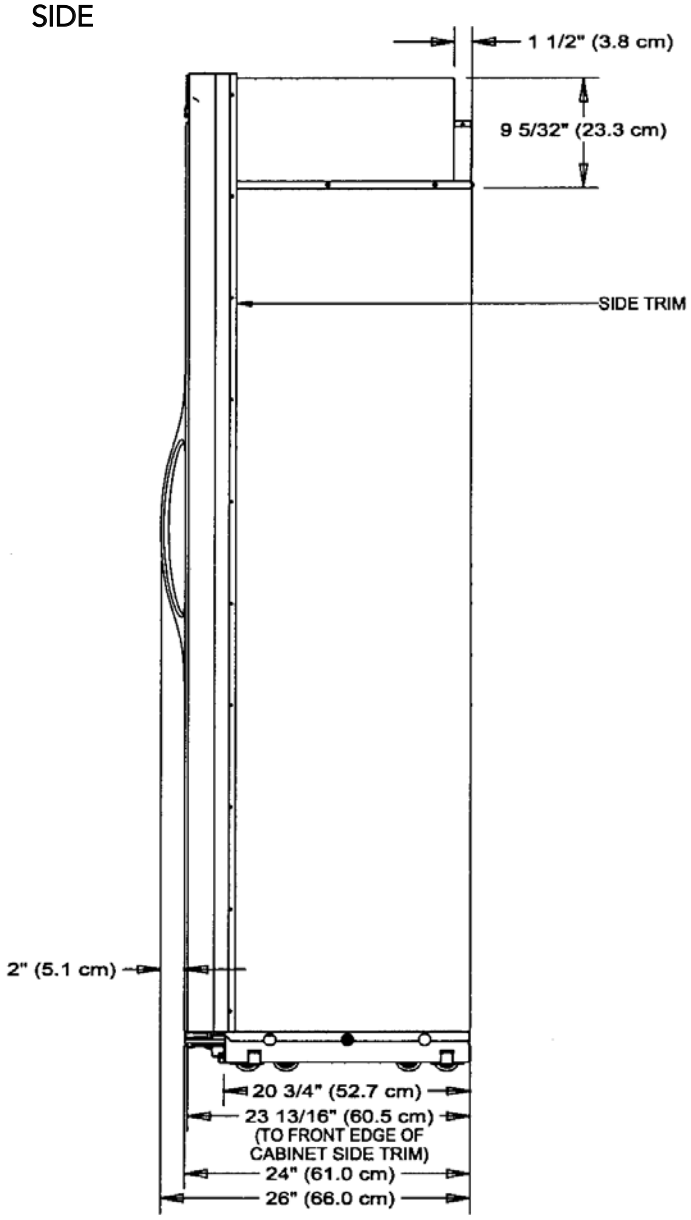

	A	B
42" W	42"(106.7 cm)	41"(104.1cm)
48" W	48"(121.9 cm)	47"(119.4 cm)

CABINET AND PANEL INFORMATION - DESIGNER MODELS

Designer models fit flush in standard 24” (61.0 cm) deep cabinet openings with no protrusion into the room except 2” (5.1 cm) curved handle depth

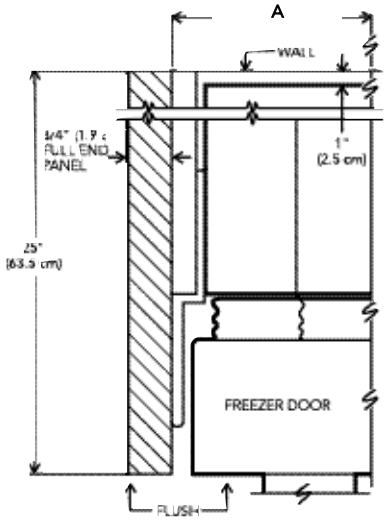

DÉTAIL A-A

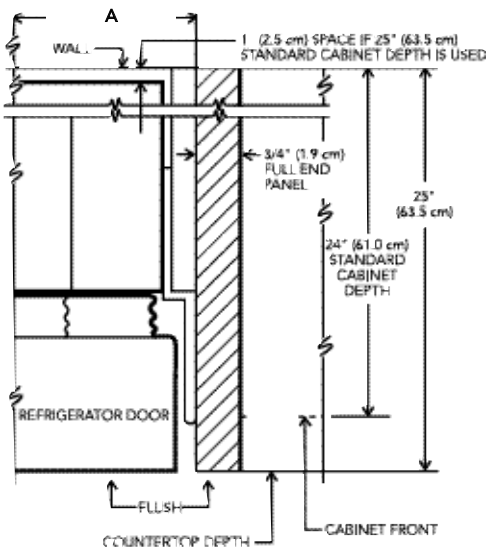

DÉTAIL B-B

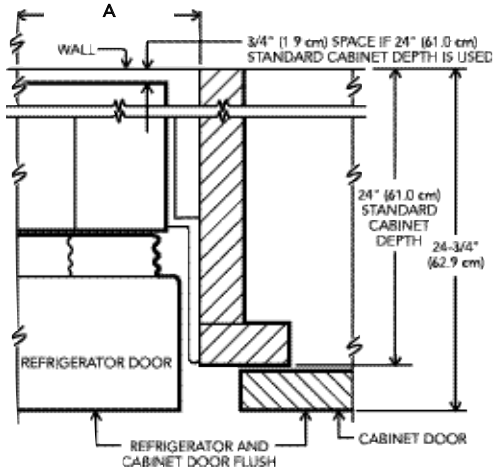

**WITH ADJACENT CABINETS;
OVERLAPPING CABINET DOORS**

DÉTAIL A-A

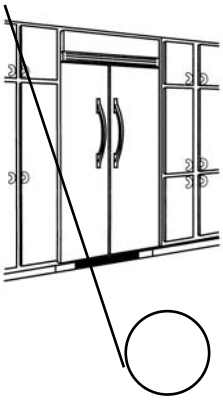

DÉTAIL B-B

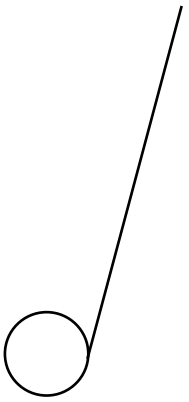

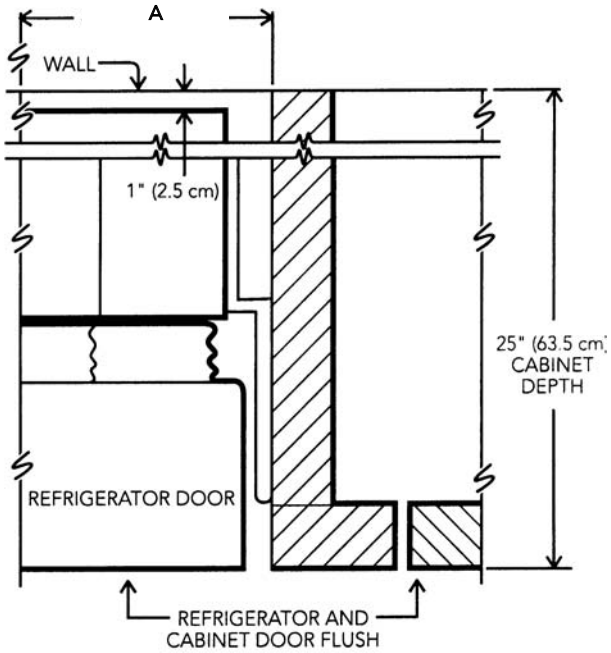

**WITH ADJACENT CABINETS;
FLUSH MOUNT CABINET DOORS**

	A
42" W	42"(106.7 cm)
48" W	48"(121.9 cm)

SIDE-BY-SIDE REFRIGERATOR OVERALL DIMENSIONS - FULL OVERLAY MODELS

TOP

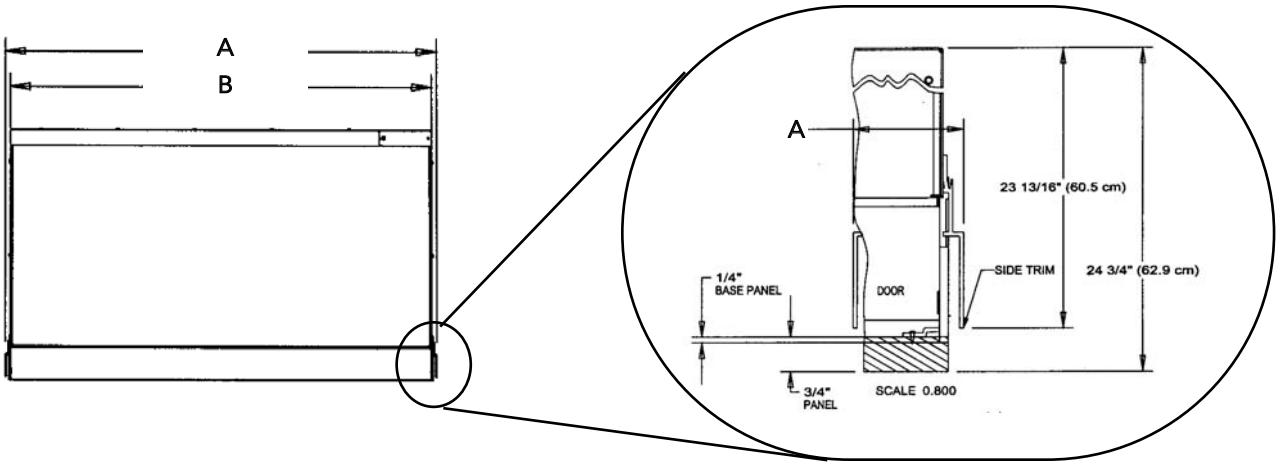

SIDE

FRONT

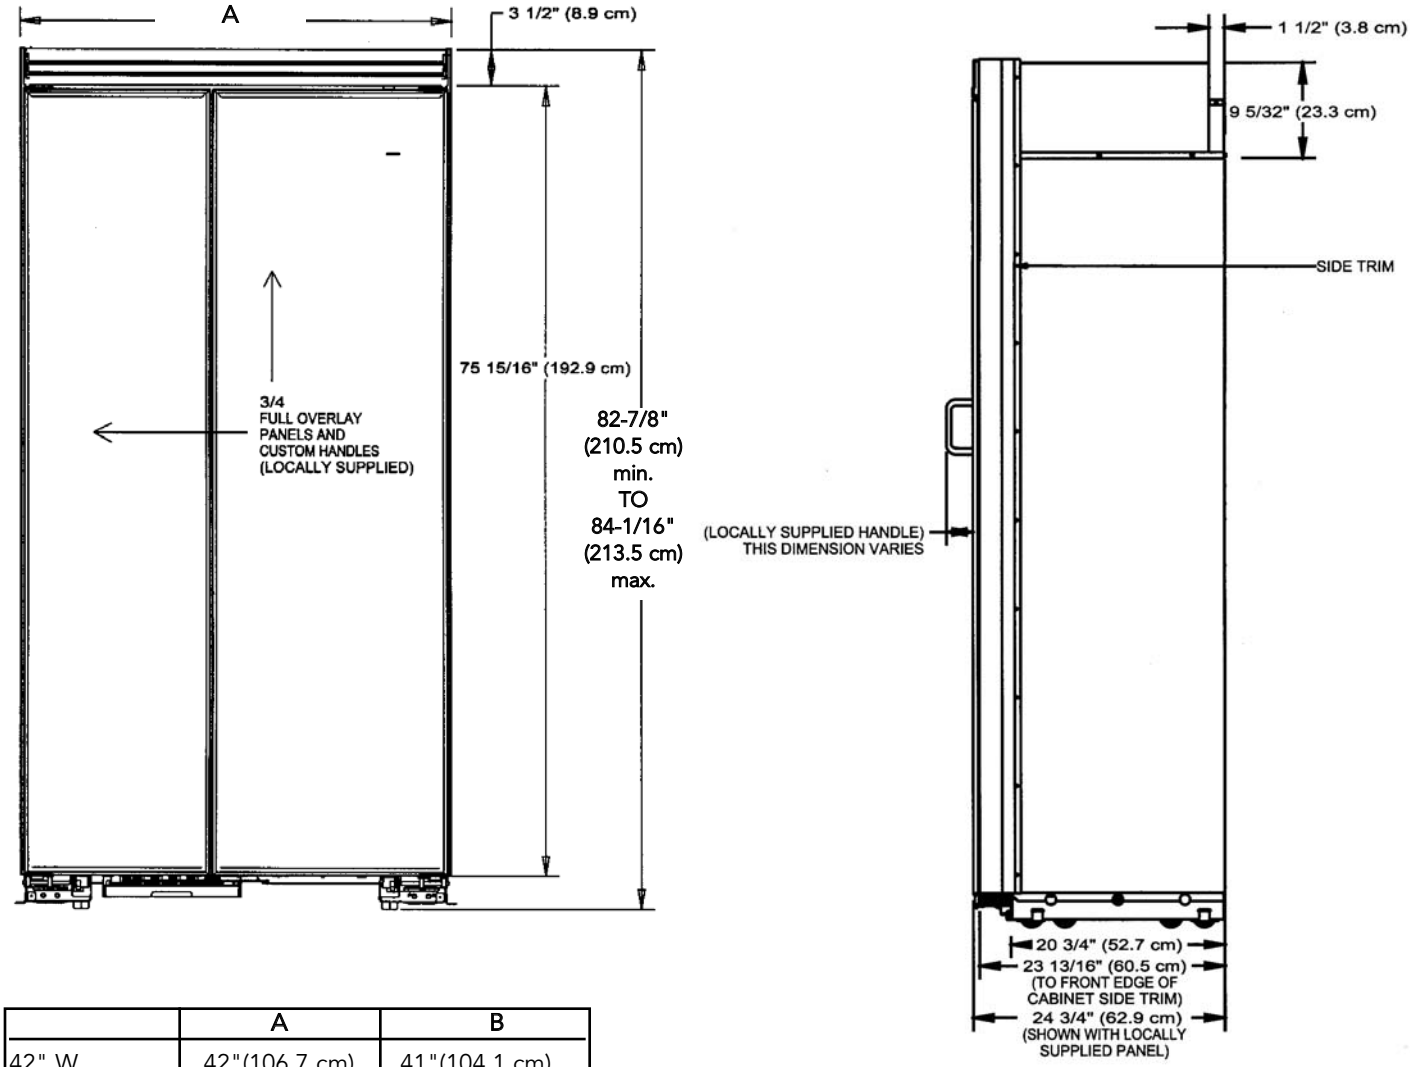

	A	B
42" W	42"(106.7 cm)	41"(104.1 cm)
48" W	48"(121.9 cm)	47"(119.4 cm)

CABINET AND PANEL INFORMATION - FULL OVERLAY MODELS

Full overlay models, (with 3/4" [1.9 cm], thick panels and custome handles locally supplied), fit flush in 25" (63.5 cm) deep (countertop depth) cabinet openings with no protrusin into room except custom handles

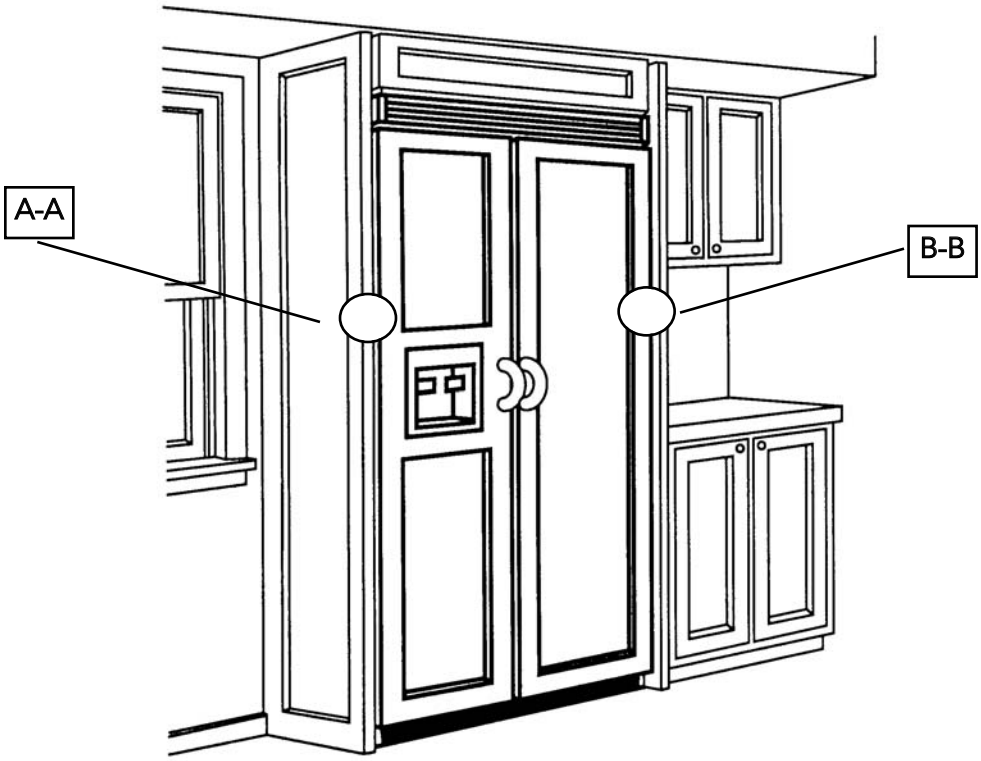

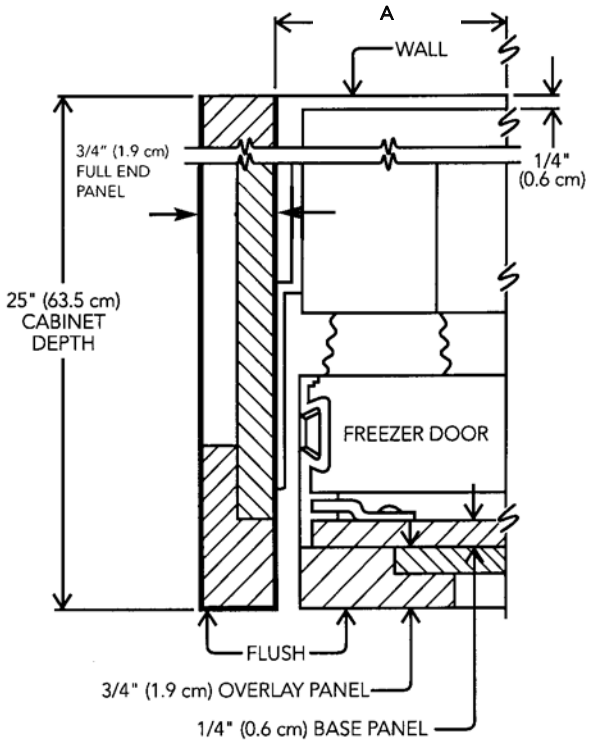

DÉTAIL A-A

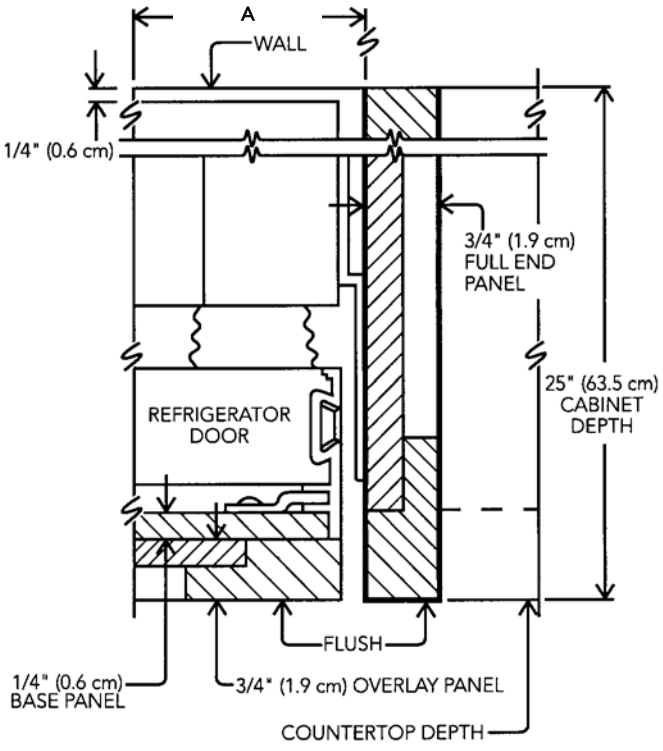

DÉTAIL B-B

	A
42" W	42"(106.7 cm)
48" W	48"(121.9 cm)

CABINET AND PANEL INFORMATION - FULL OVERLAY MODELS (CONTINUED)

Full overlay models can be installed in standard 24" (61.0 cm) deep openings. However, the door faces and top ventilation grille will protrude 3/4" (1.9 cm) into the room. This is ideal for alignment with full overlay cabinet doors.

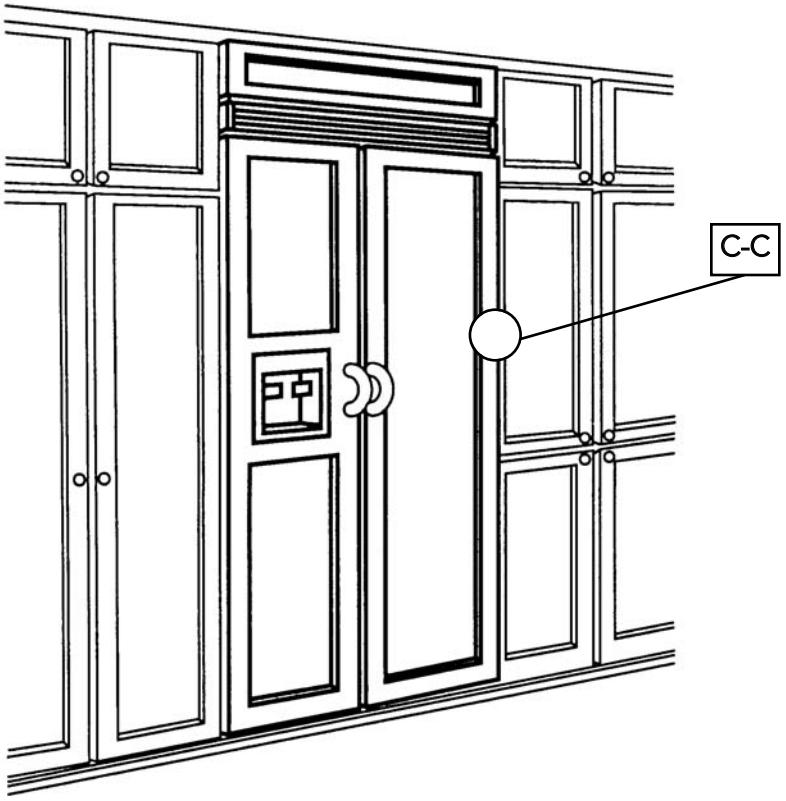

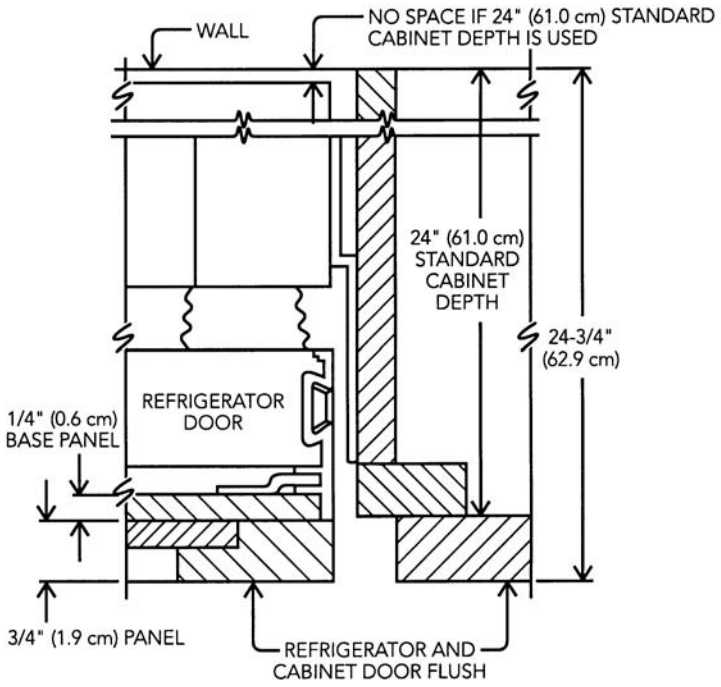
WALL
NO SPACE IF 24" (61.0 cm) STANDARD CABINET DEPTH IS USED
24" (61.0 cm) STANDARD CABINET DEPTH
24-3/4" (62.9 cm)
REFRIGERATOR DOOR
1/4" (0.6 cm) BASE PANEL
3/4" (1.9 cm) PANEL
REFRIGERATOR AND CABINET DOOR FLUSH

DÉTAIL C-C

CUSTOM DOOR PANEL DIMENSIONS - FULL OVERLAY MODELS

42" W. MODELS

Non-Dispenser Model

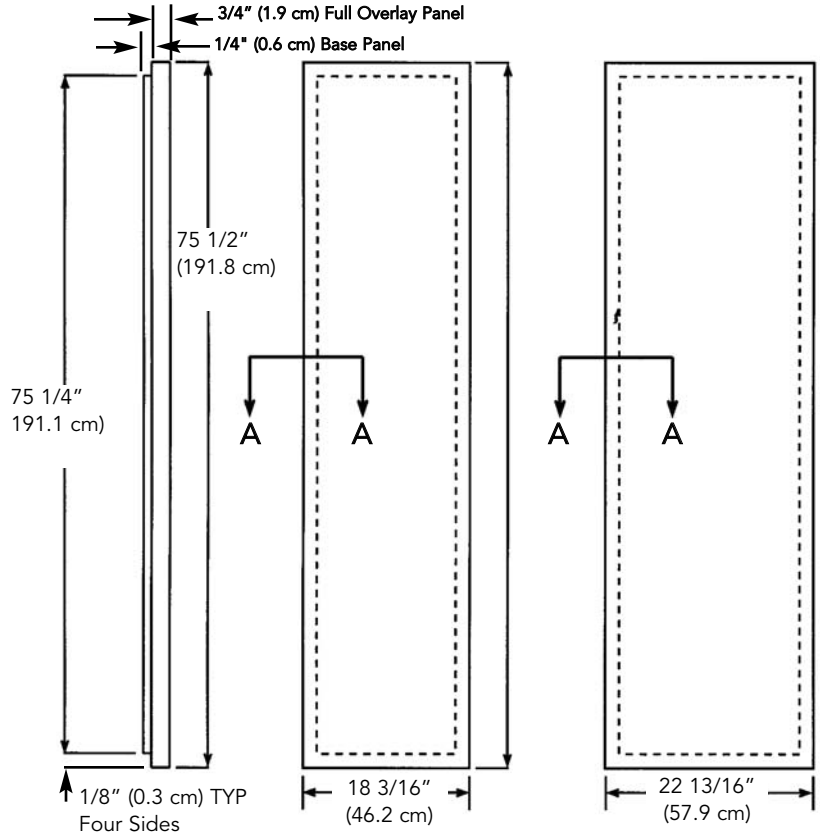

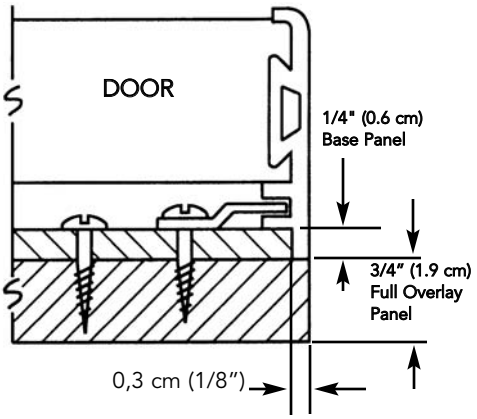

SECTION A-A
SHOWN AS MOUNTED ON DOOR
NO SCALE

Dispenser Model

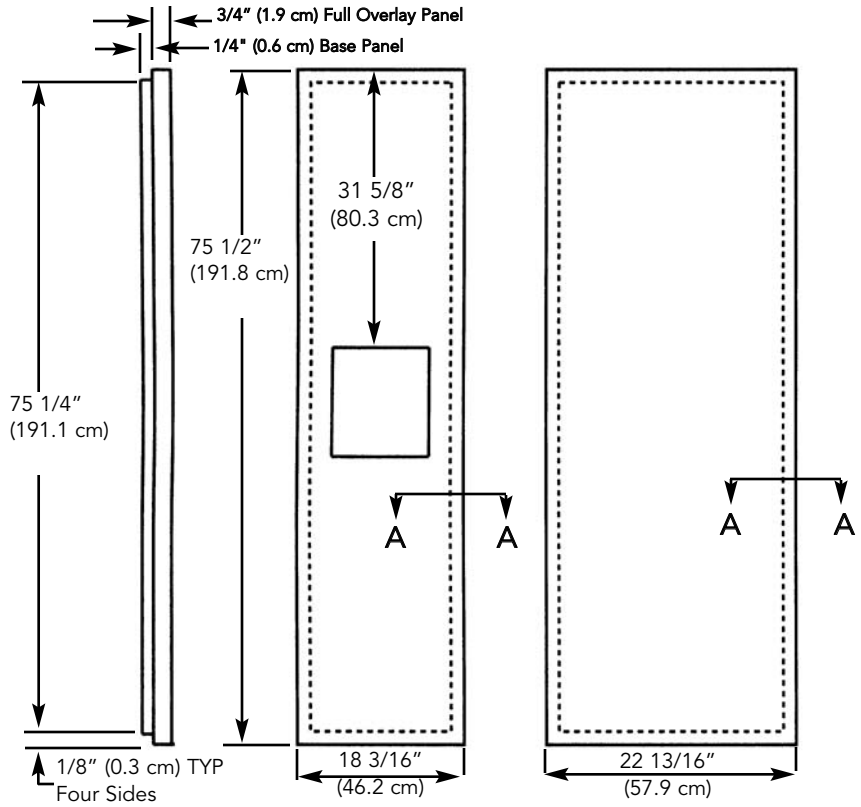

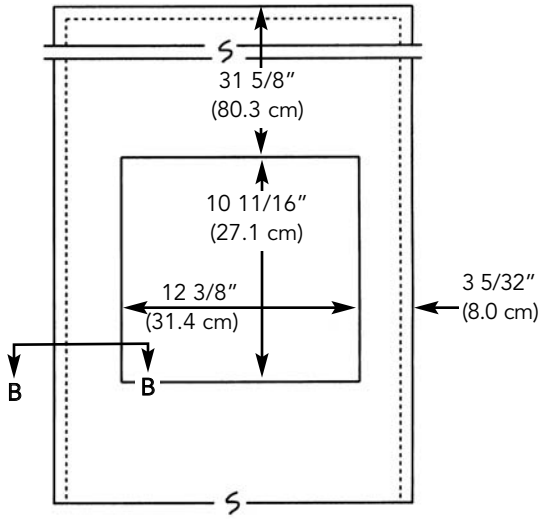

Dispenser Cutout Detail

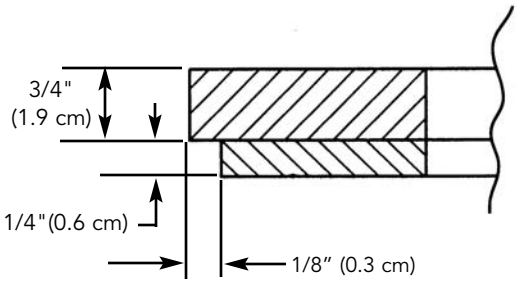

SECTION B-B
NO SCALE

CUSTOM DOOR PANEL DIMENSIONS - FULL OVERLAY MODELS

48" W. MODELS

Non-Dispenser Models

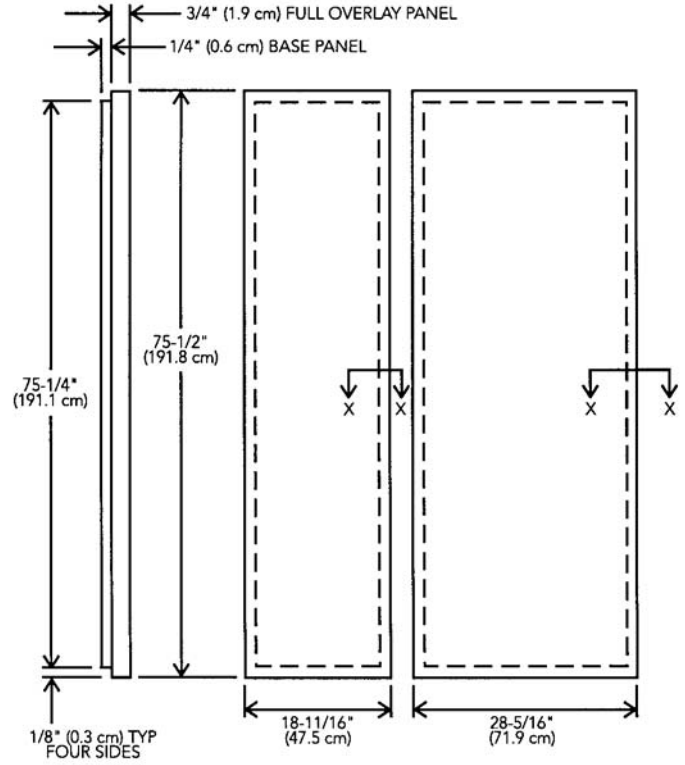

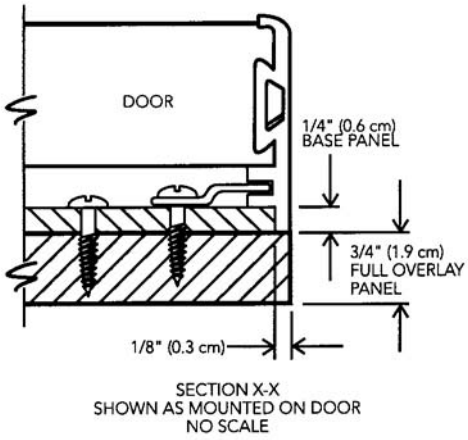

SECTION X-X
SHOWN AS MOUNTED ON DOOR
NO SCALE

Dispenser Model

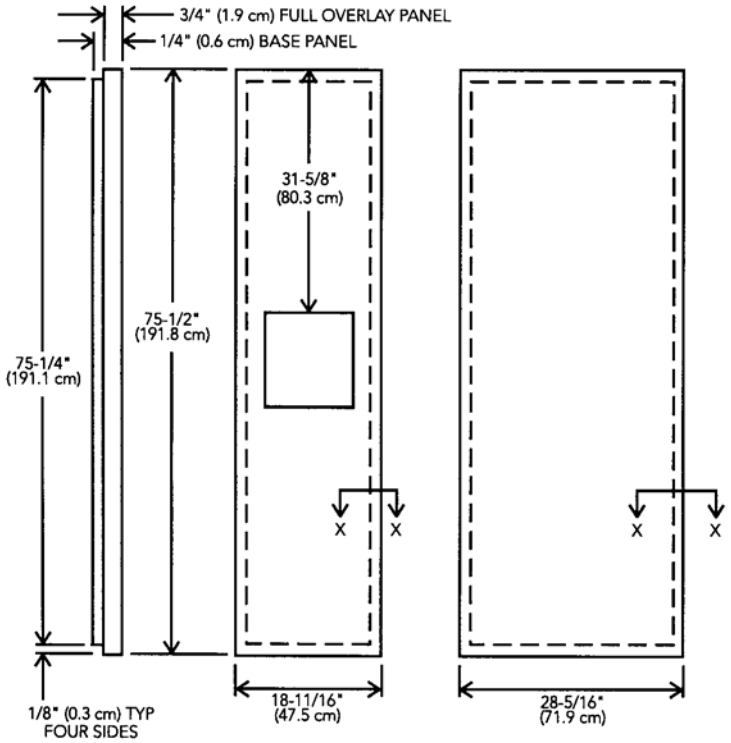

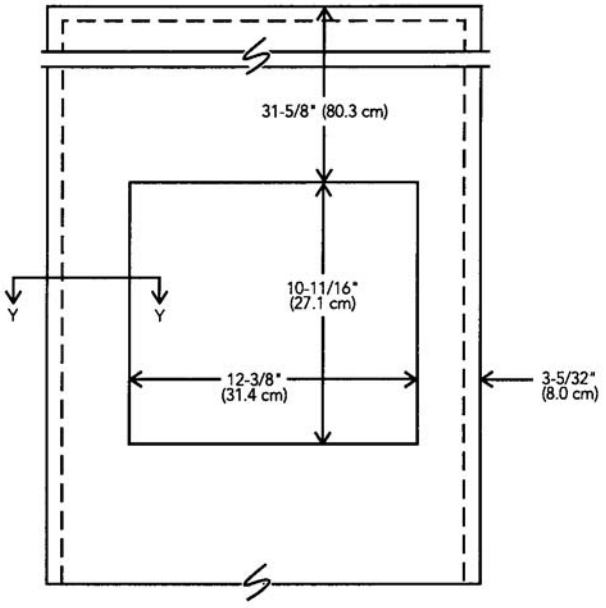

DISPENSER CUTOUT DETAIL

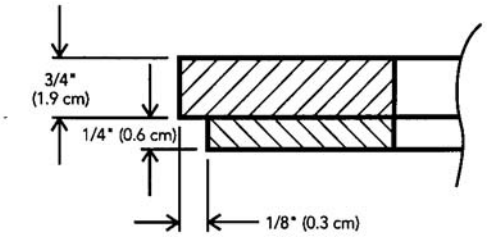

SECTION Y-Y
NO SCALE

ICE AND WATER DISPENSER BEZEL REMOVAL AND INSTALLATION
FULL OVERLAY MODELS

To Remove:

1. Remove packaging material surrounding bezel.
2. Grasping the sliding lever, pull away from bezel.
3. Remove spill tray from lower part of bezel exposing two screws.
4. Remove screws 1 & 2.
5. Locate two additional screws underneath top section of bezel.
6. Remove screws 3 & 4 and upper mounting support.
7. Grasping the bezel on both sides, pull away from the door cavity.
   NOTE: Bezel needs to be pulled slightly downward to clear water dispensing tube.
8. Store bezel and spill shelf in safe and secure place until installation.

To Install:

1. Install custom wood panels per product's installation instructions.
2. Locate opening cavity on door and position bezel in opening. NOTE: Graphics on bezel will be on top end, tilt slightly forward to allow water tube clearance.
3. Push bezel firmly into cavity until lower screw holes align with mounting holes on cavity.
4. Install screws 1 & 2 but do not tighten all the way.
5. Locate mounting holes underneath top section of the bezel.
6. Position upper mounting support over holes underneath top section of bezel.
7. Install screws 3 & 4 but do not tighten all the way.
8. Adjust and reposition bezel as necessary.
9. Tighten all screws securely and replace spill shelf in lower part of bezel.
10. Align cube switch with sliding lever and firmly push until sliding lever is flush with bezel.

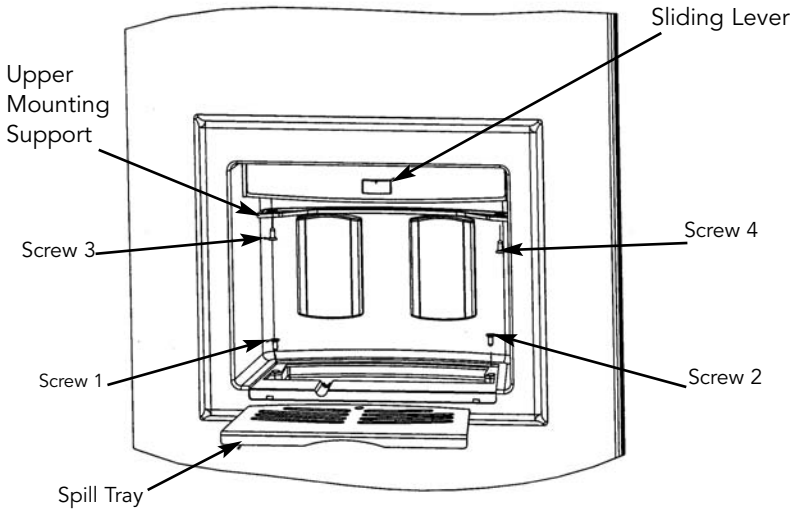

DOOR PANE INSTALLATION
FULL OVERLAY MODELS

1. Remove cabinet side trim with a phillips screwdriver.
2. Remove handle-side door trim with a phillips screwdriver.
3. Install "Z" brackets (see page 25 for details).
4. Align panel in door trim and push evenly. For smoother installation, apply liquid soap to door trim and "Z" brackets.
5. Install handle-side door trim with screws. Install door trim inserts (supplied) on all four sides of door by starting in one corner and pushing the strip in place.
6. Install cabinet trim.

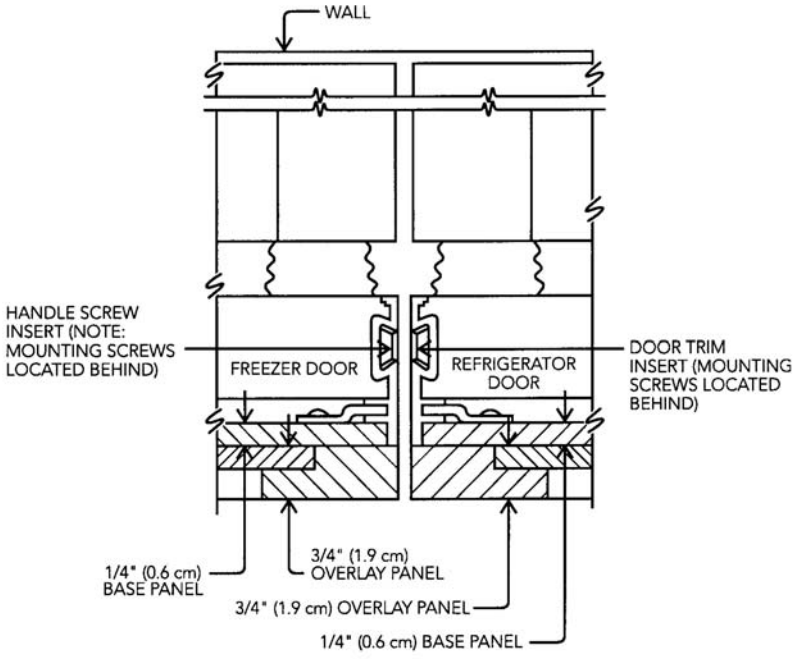
WALL
HANDLE SCREW INSERT (NOTE: MOUNTING SCREWS LOCATED BEHIND)
FREEZER DOOR
REFRIGERATOR DOOR
DOOR TRIM INSERT (MOUNTING SCREWS LOCATED BEHIND)
1/4" (0.6 cm) BASE PANEL
3/4" (1.9 cm) OVERLAY PANEL
3/4" (1.9 cm) OVERLAY PANEL
1/4" (0.6 cm) BASE PANEL

"Z" BRACKET INSTALLATION - FULL OVERLAY MODELS

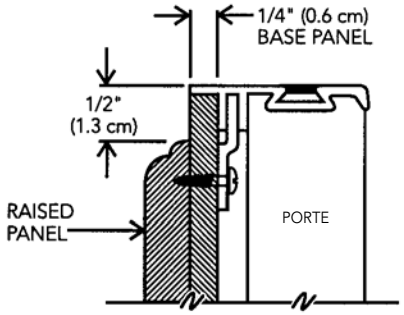

SECTION A-A
CUSTOM-RAISED PANELS
ATTACHED TO 1/4" (0.6 cm)
BASE PANEL

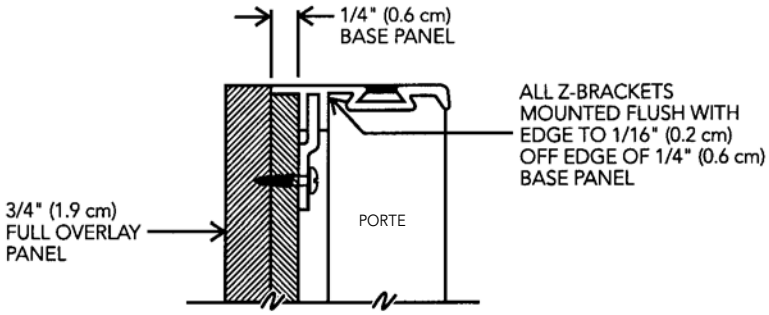

SECTION A-A
3/4" (1.9 cm) FULL OVERLAY
PANEL ATTACHED TO
1/4" (0.6 cm) BASE PANEL

Non-Dispenser Model

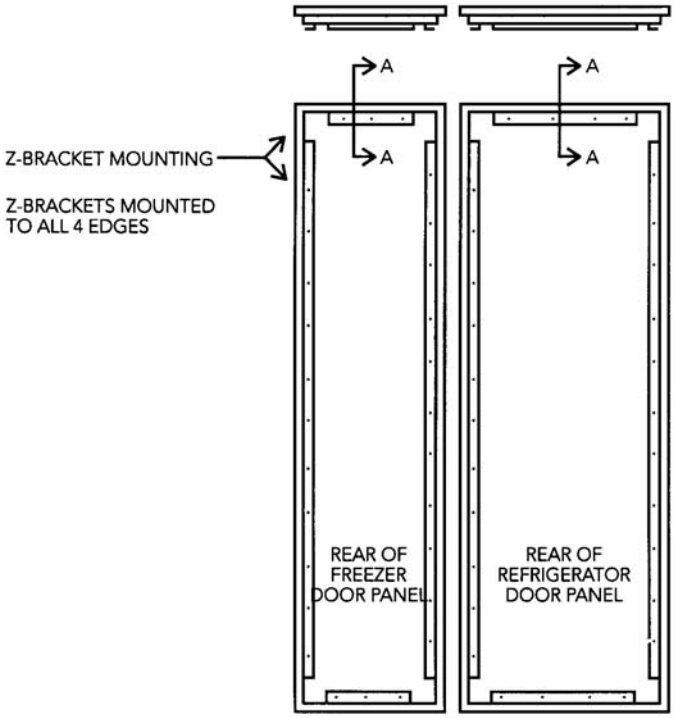

Dispenser Model

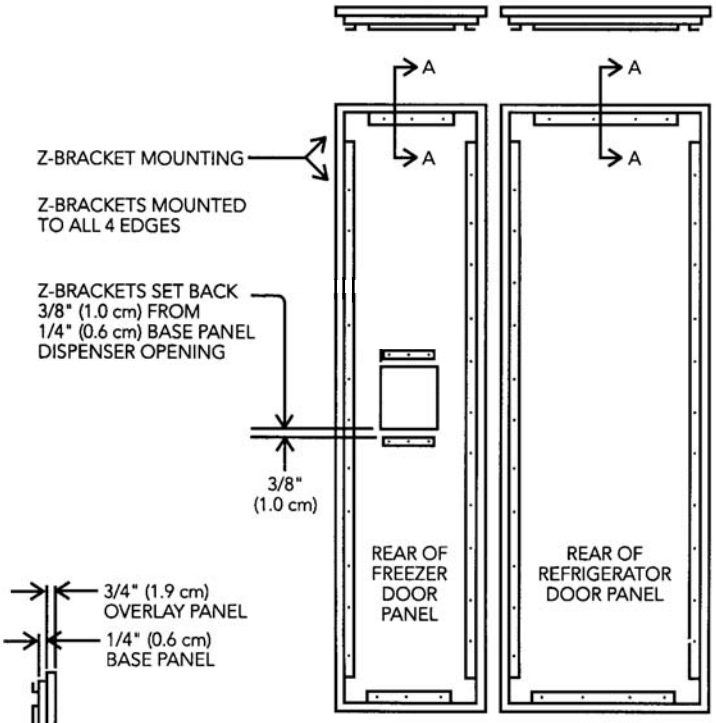

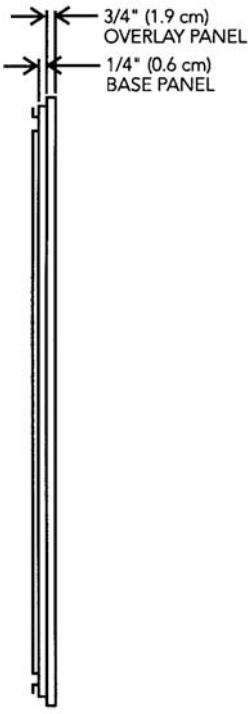

CUSTOM SIDE PANEL DIMENSIONS
DESIGNER/FULL OVERLAY MODELS

FOR 3/4" (1.9 cm) SIDE PANELS

NOTE: Adding a 3/4" (1.9 cm) side panel adds an additional 3/4"(1.9 cm) to the overall width of the product for each side panel used.

NOTE: Requires side panel hardware kit (Kit Model Number - SPHKDS)

CUSTOM 3/4" (1.9 cm) SIDE PANELS (BY OTHERS) FOR DESIGNER SERIES, TRIM KIT AND FULL OVERLAY.

NOTE: Requires side panel hardware kit (Kit Model Number - SPHKDS)

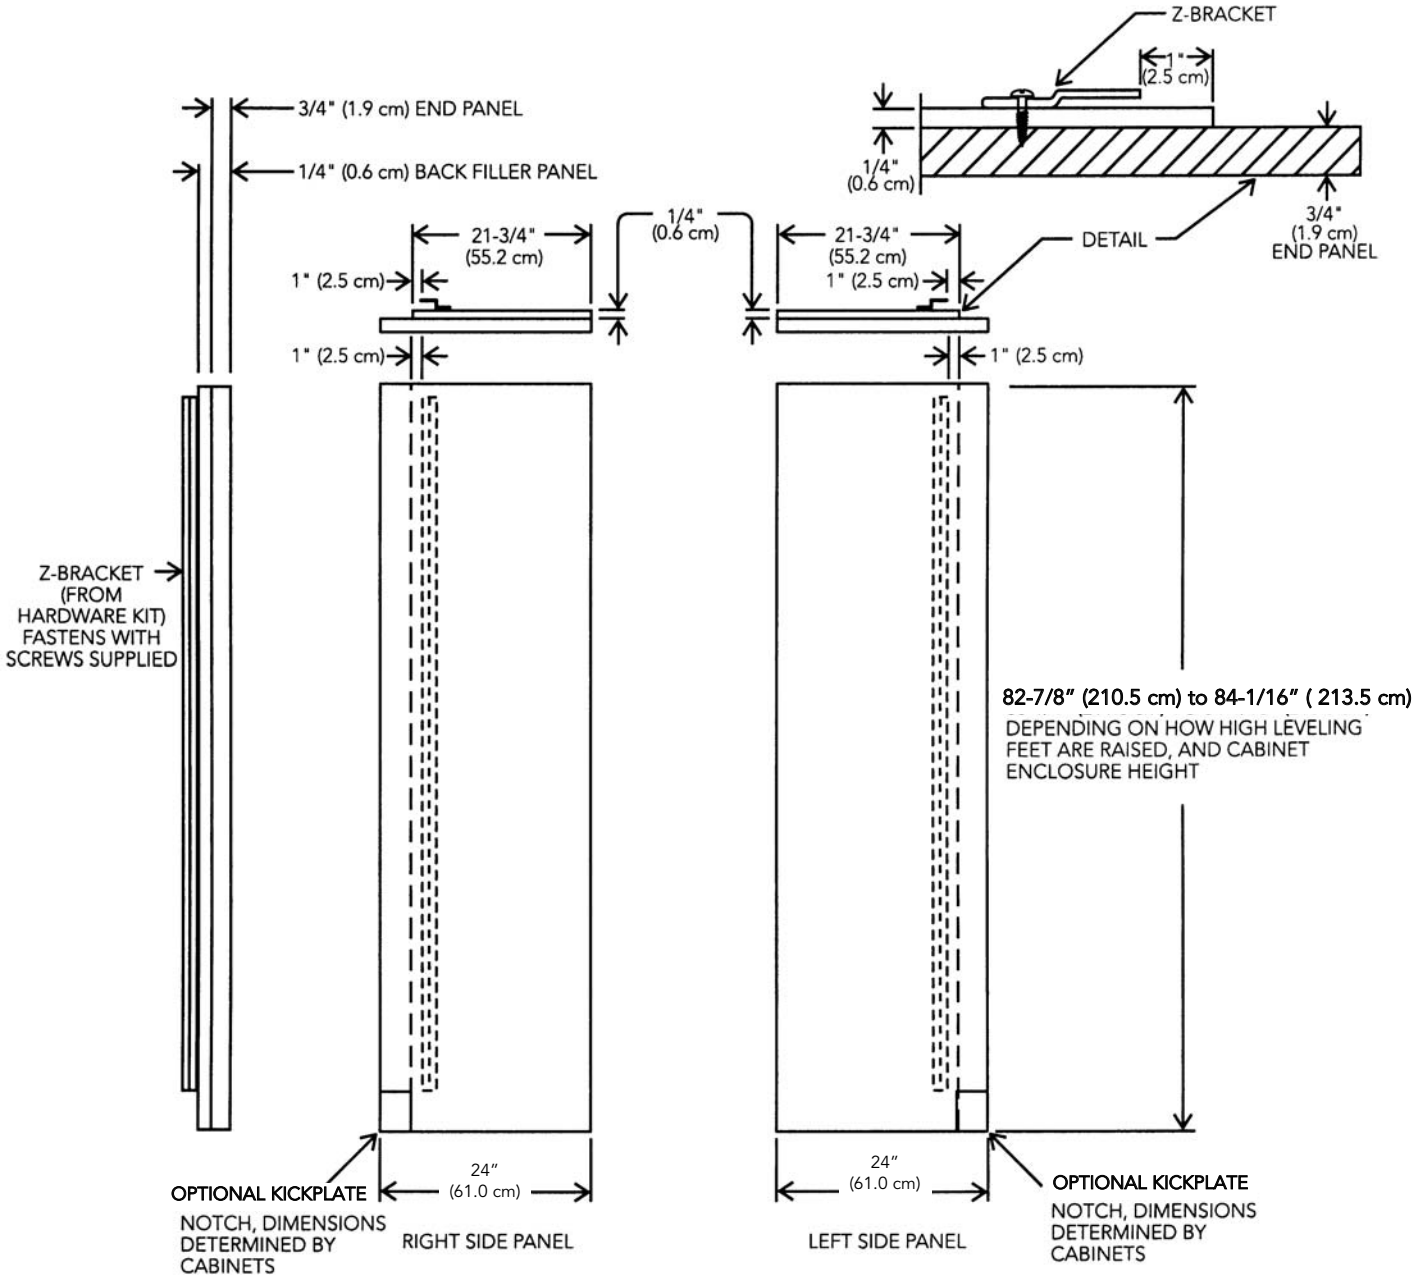
Z-BRACKET
1" (2.5 cm)
1/4" (0.6 cm)
3/4" (1.9 cm) END PANEL
1/4" (0.6 cm) BACK FILLER PANEL
21-3/4" (55.2 cm)
1" (2.5 cm)
1/4" (0.6 cm)
21-3/4" (55.2 cm)
1" (2.5 cm)
DETAIL
3/4" (1.9 cm) END PANEL
1" (2.5 cm)
1" (2.5 cm)
Z-BRACKET (FROM HARDWARE KIT) FASTENS WITH SCREWS SUPPLIED
82-7/8" (210.5 cm) to 84-1/16" (213.5 cm)
DEPENDING ON HOW HIGH LEVELING FEET ARE RAISED, AND CABINET ENCLOSURE HEIGHT
OPTIONAL KICKPLATE
NOTCH, DIMENSIONS DETERMINED BY CABINETS
24" (61.0 cm)
RIGHT SIDE PANEL
24" (61.0 cm)
LEFT SIDE PANEL
OPTIONAL KICKPLATE
NOTCH, DIMENSIONS DETERMINED BY CABINETS

REFRIGERATOR INSTALLATION

⚠ WARNING

Use two or more people to move and install refrigerator. Failure to follow this instruction can result in back or other injury. To avoid personal injury, wear gloves when performing any installation procedure and wear eye protection when cutting metal straps.

⚠ WARNING

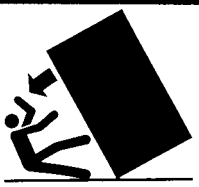

TIP OVER HAZARD

Refrigerator is top heavy and tips easily when not completely installed. Keep doors closed until refrigerator is completely installed and secured per installation instructions.

Use two or more people to move and install refrigerator. Failure to do so can result in death or serious injury.

Most of the refrigerator's weight is at the top. Extra care is needed when moving the refrigerator to prevent tipping. Do Not remove protective film until refrigerator is in operating position. All four leveling legs must contact the floor to support and stabilize the full weight. Do not drop refrigerator.

1. Remove exterior shipping materials prior to moving refrigerator into home. Remove top and bottom strap (see Figure 1).

2. Remove top cap (see Figure 1).

3. Cut carton rear approximately 1/4" (.64 cm) to 1" (2.5 cm) from right corner (see Figure 2) with a utility knife extended 1/4" (.6 cm). Remove carton and exterior packaging. Save cardboard shipping material to protect floor surface when installing refrigerator. Do not remove nylon cord from power cord. Remove anti-tip board and kickplate from rear of refrigerator (see Figure 3).

4. Remove shipping brackets from skid by removing 4 bolts (2 each side) with a 1/2" socket head screwdriver (see Figure 4).
   - Tilting refrigerator is not required to remove shipping brackets.

5. Slip cart between refrigerator and skid. Remove refrigerator from skid. Use excess packaging to protect decorative trim. Verify that leveling legs are up (0" adjustment) (see Figure 5).

6. To avoid floor damage, use protective material (see Figure 6).

Figure 1

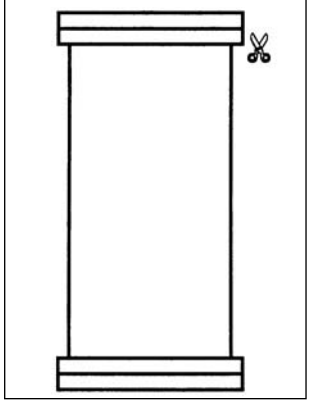

Figure 2

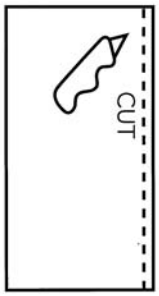

BACK VIEW

Figure 3

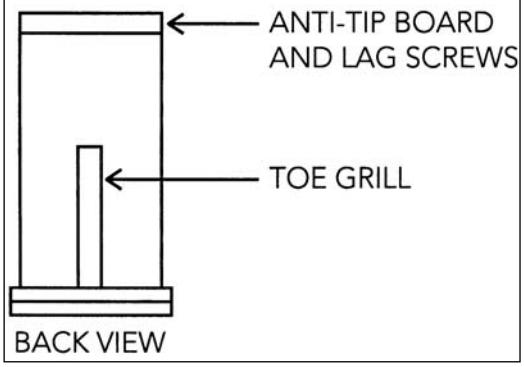

BACK VIEW

Figure 4

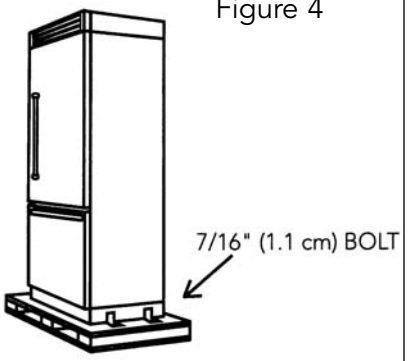

Figure 5

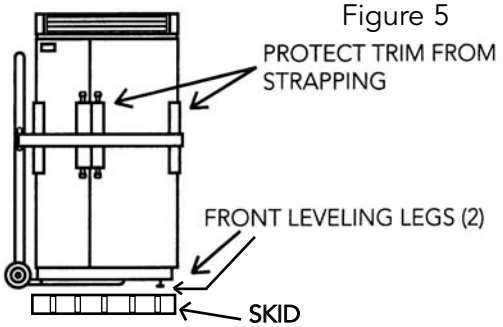

Figure 6

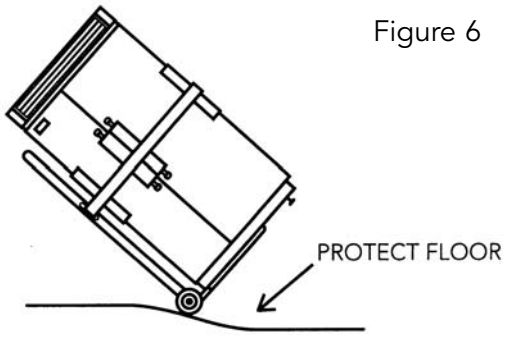

⚠WARNING

Electrical Shock Hazard

Disconnect power at breaker or turn power disconnect switch to OFF position before performing any installation procedure. Failure to do so can result in death or electrical shock.

SECURING THE REFRIGERATOR (3 OPTIONS)

OPTION 1

If a solid soffit is 1" (2.5 cm) or less above the refrigerator, anti-tip boards are not required.

OPTION 2

If a solid soffit is not available or soffit is more than 1" (2.5 cm) above refrigerator, center wood boards on rear wall 1/4" (.6 cm) maximum above refrigerator. Attach wood boards to wall studs with six of the provided wood screws, making sure that screws are engaged in wall studs 1 1/2" (3.8 cm) minimum.

OPTION 3

Create "L" bracket assembly by securing "L" brackets to each end of (1) 2x4 with provided screws (Item A). If 2x4 does not extend 2" (5.0 cm) beyond rear ledge, attach (1) 2x4 to wall (Item B), attach (1) 2x4 to rear ledge of cabinet (Item C) and attach "L" bracket assembly to 2x4 mounted on wall (Item A).

OPTION 1

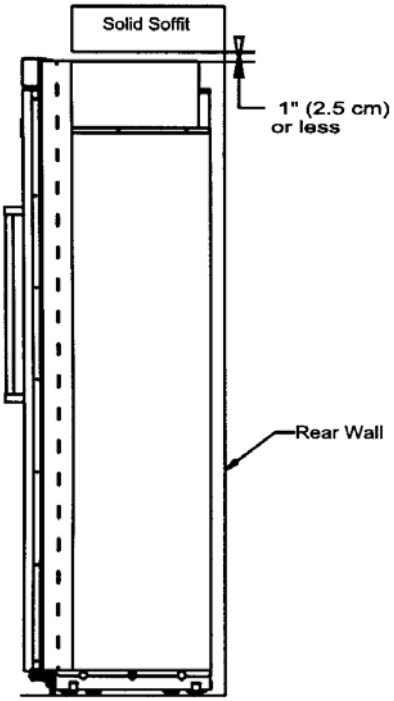

OPTION 2

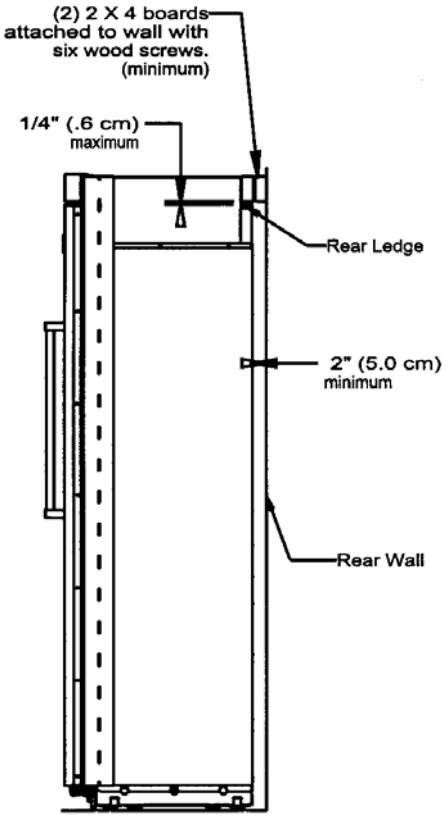

OPTION 3

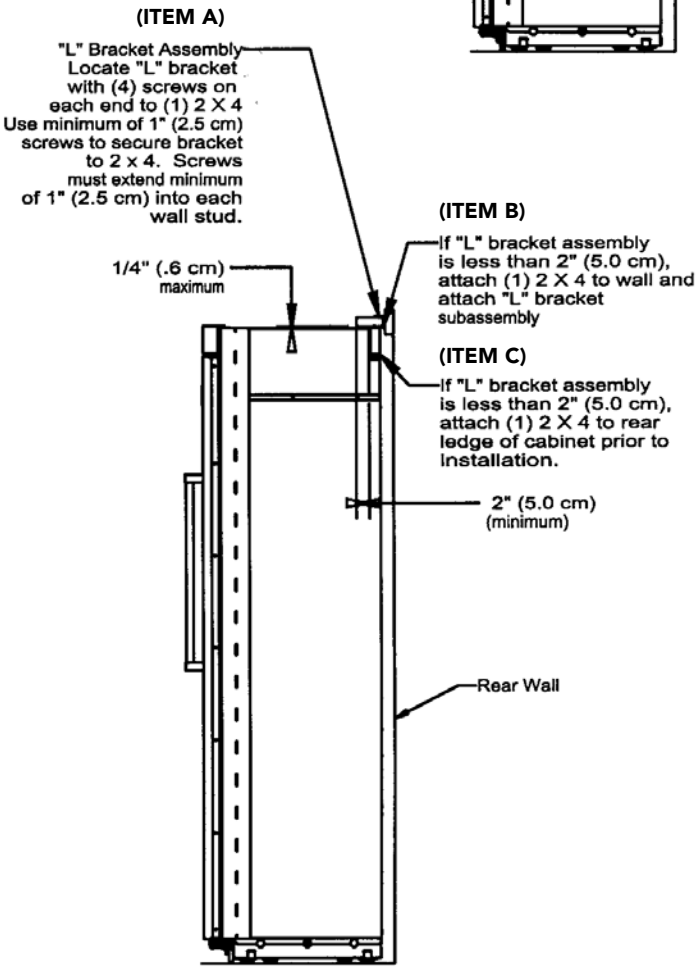
(ITEM A)
"L" Bracket Assembly Locate "L" bracket with (4) screws on each end to (1) 2 X 4 Use minimum of 1" (2.5 cm) screws to secure bracket to 2 x 4. Screws must extend minimum of 1" (2.5 cm) into each wall stud.
(ITEM B)
If "L" bracket assembly is less than 2" (5.0 cm), attach (1) 2 X 4 to wall and attach "L" bracket subassembly
1/4" (.6 cm) maximum
(ITEM C)
If "L" bracket assembly is less than 2" (5.0 cm), attach (1) 2 X 4 to rear ledge of cabinet prior to installation.
2" (5.0 cm) (minimum)
Rear Wall

Before moving the refrigerator in place, confirm the finished dimensions, electrical location, minimum door and shelf clearances, and door panel instructions. (See pages 3, 4, & 5).

1. Position refrigerator in front of cutout.
2. Verify operation by plugging power cord in receptacle. **Power switch will be shipped in the "ON" position and showroom switch will be in the "ON" position.** (If showroom switch is switched to the "OFF" position, showroom mode is engaged and power is shut-off to the compressor. This mode is for showroom display only).

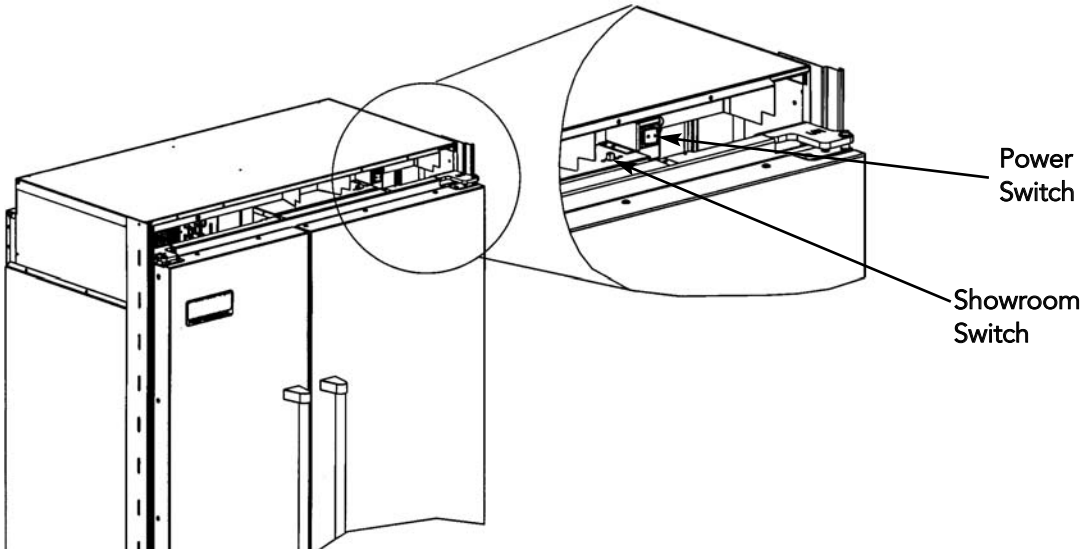

3. Roll refrigerator into cutout to within 3" (7.6 cm) of being flush with cabinets. To avoid kitchen cabinet damage, place cardboard between cabinets and refrigerator. Push cardboard back with refrigerator and remove cardboard when refrigerator is in place. NOTE: When moving the unit into position, be careful not to crimp, kink or crush the copper water supply line.

4. Lift the refrigerator off the rollers, adjust to desired height and level refrigerator by using a 5/16" hex head wrench. (Refer to Figure at the right)
   a) To raise (clockwise)/lower (counterclockwise) right side rear, rotate the right side rear hex rod.
   b) To raise (clockwise)/lower (counterclockwise) the left side rear, rotate the left side rear hex rod.
   c) To raise (clockwise)/lower (counterclockwise) the right side front, rotate the right side front hex rod.
   d) To raise (clockwise)/lower (counterclockwise) the left side front, rotate the left side front hex rod.

NOTE: DO NOT use an electric driving device. Overtightening can cause damage.

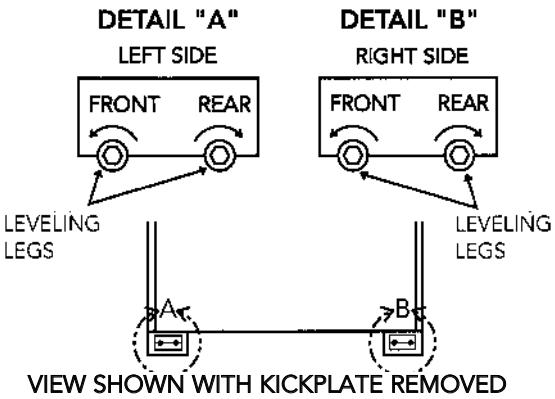

VIEW SHOWN WITH KICKPLATE REMOVED

5. Align refrigerator with sides of cabinets by adjusting leveling legs. Rotate leveling legs until firmly in place against floor.

6. To secure refrigerator, raise unit until compartment cover is firmly seated under the soffit or anti-tip boards.

7. Open door. Display should flash. Press any key. There is a 6 minute delay before the refrigerator starts. Verify the position of the power on/off and showroom switch if there is no power to refrigerator.

WATER CONNECTION

•Refer to water supply requirement section for preliminary installation and site preparation (see page 4).
•**Do not use plastic water lines between refrigerator and supply. Plastic water lines can fail due to fatigue over time and cause extensive damage to product and the home.**
•**Use only 1/4" copper tubing for water line.**
•**Do not connect to reverse osmosis water filtration system.**

The 1/4" brass compression union is located in the literature packet.

1. Pull copper supply tubing from plumbing forward from underneath refrigerator (see Figure A).
2. Flush air and impurities from water line by turning on water supply and running two (2) quarts of water into a bucket.
3. Bend the open end of the supply tube to point toward the open end of the Water Valve Tube (see Figure B). Note: The Water Valve Tube is designed to flex or bend as necessary to line up with the supply tube, so union can be connected easily.
4. Remove brass nuts and ferrules from union and slide onto open ends of Water Valve Tube and supply tubing (see Figure C).
5. Connect nuts on copper tubing to union (see Figure D). Be sure both nuts are fully seated in union before tightening nuts. Do Not over tighten.
6. Turn on water supply to refrigerator and check for leaks.
7. Turn off water supply to refrigerator and correct any leaks. Repeat this process until no leaks exist.
8. Completely turn on water supply to refrigerator.
9. Verify drain pan is installed and aligned. Drain pan must be pushed past and over initial stopping point.

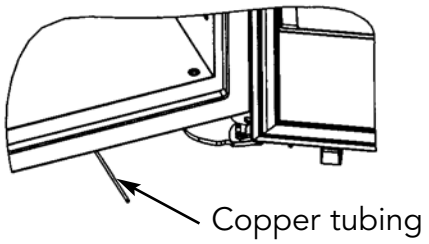

Figure A

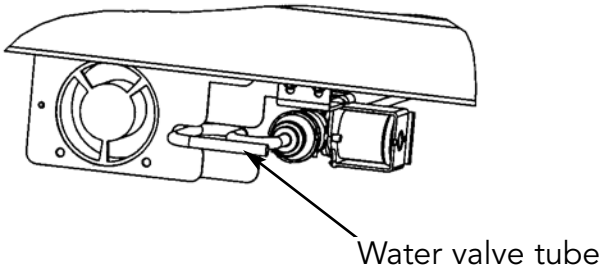

Figure B

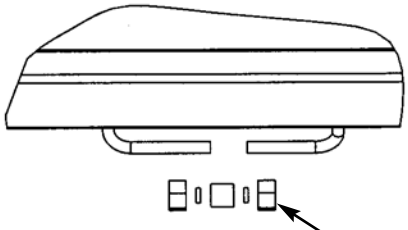

Figure C

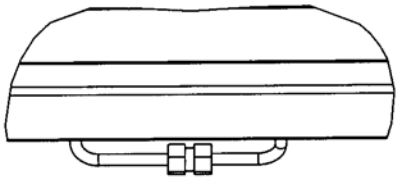

Figure D

WATER CONNECTION (ICE AND WATER DISPENSER MODEL)

•Refer to water supply requirement section for preliminary installation and site preparation (see page 4).
•Do not use plastic water lines between refrigerator and supply . If moved repeatedly, plastic water lines can fail due to fatigue over time and cause extensive damage to product and the home.
•Use only 1/4" (.6 cm) copper tubing for water line.
•Do not connect to reverse osmosis water filtration system.

The 1/4" brass compression union and tube insert are located in the literature packet.
NOTE: The garden hose fitting will be attached to the water solenoid valve. Do Not Remove.

1. Pull copper supply tubing from plumbing forward from underneath refrigerator (see Figure A).
2. Flush air and impurities from water line by turning on water supply and running two (2) quarts of water into a bucket.
3. Bend the open end of the copper supply tube toward the open end of the 1/4" plastic filter tube. (see Figure B).
4. Remove tube insert, located in literature packet, and slide into the plastic filter tube. (see Figure B).
5. Remove brass nuts and ferrules from compression union, located in the literature packet. and slide onto open ends of plastic filter tube and copper supply tube (see Figure C).
6. Connect brass nut on plastic/copper tubing to union (see Figure D). Be sure both tubes are fully seated in union before tightening nuts. Do Not over tighten.
7. Turn on water supply to refrigerator and check for leaks.
8. Turn off water supply to refrigerator and correct any leaks. Repeat this process until no leaks exist.
9. Completely turn on water supply to refrigerator.
10. Verify drain pan is installed and aligned. Drain pan must be pushed past and over initial stopping point.

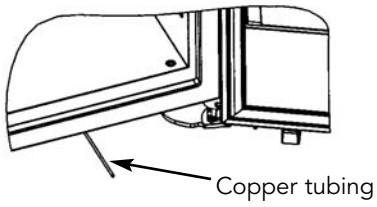

Figure A

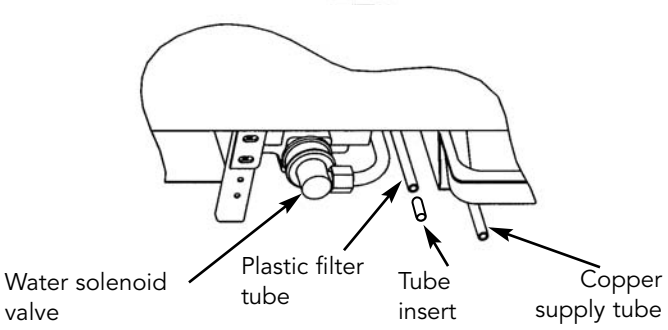

Figure B

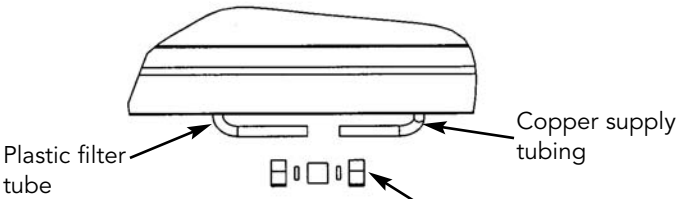

Figure C

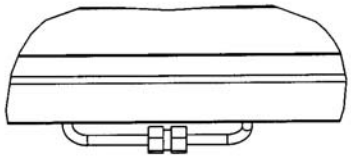

Figure D

WATER FILTER INSTALLATION

WARNING

To avoid serious illness or death, do not use unit where water is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts. The contaminants or other substances removed or reduced by this water treatment system are not necessarily in your water.

CAUTION

Be sure to have replacement cartridge available when filter change is required.
- If water filtration system has been allowed to freeze, replace filter cartridge.
- If system has not been used for several months, and water has an unpleasant taste or odor, flush system by dispensing 2-3 glasses of water. If unpleasant taste or odor persists, change filter cartridge.

INITIAL INSTALLATION OF WATER FILTER

1. Locate water filter door. The door is located under the Meat Savor™/Produce drawer handle. (See figure 1)
2. Push upper left corner of door to release latch and pull door downward
3. Insert filter cartridge into circular opening in filter housing. Move filter cartridge horizontally unitl filter head is engaged. Rotate gently clockwise until filter stops.
4. Flush air from the system by running water through the dispenser continuously for 3 minutes. Continue to run water if water spurts occur until water runs steady. Additional flushing may be required in areas with poor quality water.
   NOTE: Allow 1-2 minute delay in water dispersal to allow internal water tank to fill.

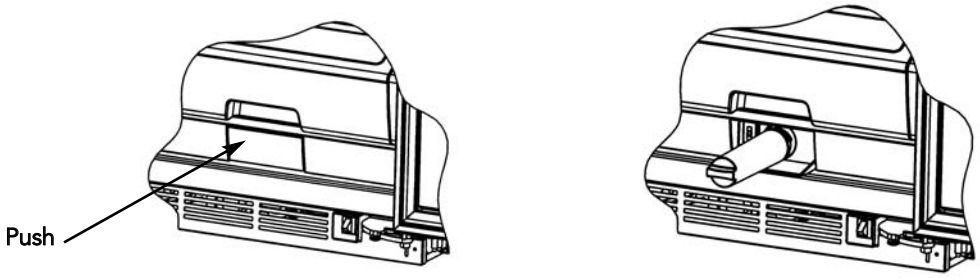

Figure 1
(42" W. model shown)

REPLACING WATER FILTER

IMPORTANT: Air trapped in water filtration system may cause water and cartridge to eject. Use caution when removing.

1. Repeat steps 1 and 2 under "Initial Installation of Water Filter"
2. Turn filter cartridge counterclockwise until it releases from filter head.
3. Drain water from filter into sink and dispose of cartridge.
4. Wipe up excess water at filter location and continue with steps 2 and 3 above.

WHEN TO CHANGE THE WATER FILTER

IMPORTANT: Condition of the water and amount used determines life span of water filter cartridge. If water use is high, or if water is of poor quality, replacement may need to be more frequent.

The water filter should be changed approximately every 9 months or after **750** gallons of water is used (whichever comes first). Replace cartridge when flow becomes too slow.

HOW TO ORDER REPLACEMENT FILTER CARTRIDGES

Replacement filters are available through your local Viking Range dealer. You may also order them by calling Viking Range Customer Service at 1-888-845-4641 or online at www.vikingrange.com.

SYSTEM SPECIFICATION AND PERFORMANCE DATA SHEET

This system has been tested according to NSF/ANSI 42/53 for reduction of the substances listed below. The concentration of the indicated substances in water entering the system was reduced to a concentration of less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI 42/53.* (100% safety factors built-in for unmetered usage for health claims only.)

Standard No. 42: Aesthetic Effects								
Parameter	USEPA McL	Influent Average	Influent Challenge Concentrations	Effluent		%Reduction		Min. Req. Reduction
				Average	Maximum	Average	Minimum	
Chlorine	——	1.88 mg/L	2.0 mg/L ± 10%	<0.05mg/L	0.06 mg/L	>97.26%	96.84%	≥ 50%
T&O	——	——	——	——	——	——	——	——
Particulates**		5,700,000 #/mL	at least 10,000 particles/mL	29.83#/mL	140 #/mL	99.98%	99.91%	≥ 85%

Standard No. 53: Health Effects								
Parameter	USEPA McL	Influent Average	Influent Challenge Concentrations	Effluent		%Reduction		Min. Req. Reduction
				Average	Maximum	Average	Minimum	
Turbidity	1 NTU***	10.73 NTU***	11 ± 1 NTU	0.36 NTU	.049 NTU	97.09%	95.20%	0.5 NTU
Cysts	99.95% Reduction	200,000 #/L	min. 50,000/L	<1	<1	>99.99%	>99.99%	>99.95%
Asbestos	99% Reduction	155 MF/L	10^7 & 10^8 fibers/L fibers>10micrometers	<1	<1	>99.99%	>99.99%	99%
Lead at pH 6.5	0.015 mg/L	0.153 mg/L	0.15mg/L ± 10%	<.001	<.001	>99.35%	>99.35%	0.010 mg/L
Lead at pH 8.5	0.015 mg/L	0.150 mg/L	0.15mg/L ± 10%	<.001	<.001	>99.35%	97.35%	0.010 mg/L
Mercury at pH 6.5	0.002 mg/L	0.006 mg/L	.006mg/L ± -10%	0.00026	0.0005	98.72%	90.91%	0.002mg/L
Mercury at pH 8.5	0.002mg/L	0.006 mg/L	.006mg/L ± -10%	0.0008	0.0015	98.72%	75.93%	0.002mg/L
Lindane	0.0002 mg/L	0.002 mg/L	.002mg/L ± 10%	0.000025	0.00007	98.72%	96.50%	0.0002mg/L
Atrazine	0.003 mg/L	0.00873 mg/L	.009mg/L ± 10%	<.002 mg/L	<.002 mg/L	76.99%	75.31%	0.003 mg/L
Toxaphene	0.003 mg/L	0.015 mg/L	.015mg/L ± 10%	<0.001	<0.001	92.97%	91.67%	0.003mg/L

*Tested using a flow rate of 0.5 gpm; pressure of 60 psig; pH of 7.5 ± 0.5; temp of 68° ± 5°F (20° ± 3°C)
**Measurement in particles/mL. Particles used were 0.5 - 1 microns
***NTU = Nephelometric Turbidity units

Operating Specifications

Capacity: Certified for up to 750 gallons (2,838 L); up to nine months
Pressure Requirement: 40 - 120 psi (2.8 - 8.2 bar)
Temperature: 33-100°F (0.6 - 38°C)
Flow rate: 0.78 gpm (2.9 l/min.)

Check for compliance with the state and local laws and regulations.
Note: While the testing was performed under standard laboratory conditions, actual performance may vary. Must be installed and operated in accordance with manufacturer's recommended procedures and guidelines. Installation instructions, parts and service availability, and standard warranty are included with the product when shipped. This drinking water system must be maintained according to manufacturer's instruction, including replacement of filter cartridges.

Manufactured by: PentaPure Incorporated
1000 Apollo Road
Eagan, MN 55121
(651) 554-3140

System tested and certified by NSF International against Standard 42 for the reduction of chlorine, taste and odor, particulate Class I and Standard 53 for the reduction of Lead, Lindane, Atrazine, Mercury, Toxaphene, Cyst, Turbidity, and Abestos.

KICKPLATE INSTALLATION

Align the holes on both ends of the louvered panel with the holes in the base of the refrigerator. Adjust the kickplate to the desired height and fasten in place by tightening the screws in the slot. Attach the kickplate to the refrigerator on each side with the two black phillips head screws provided.

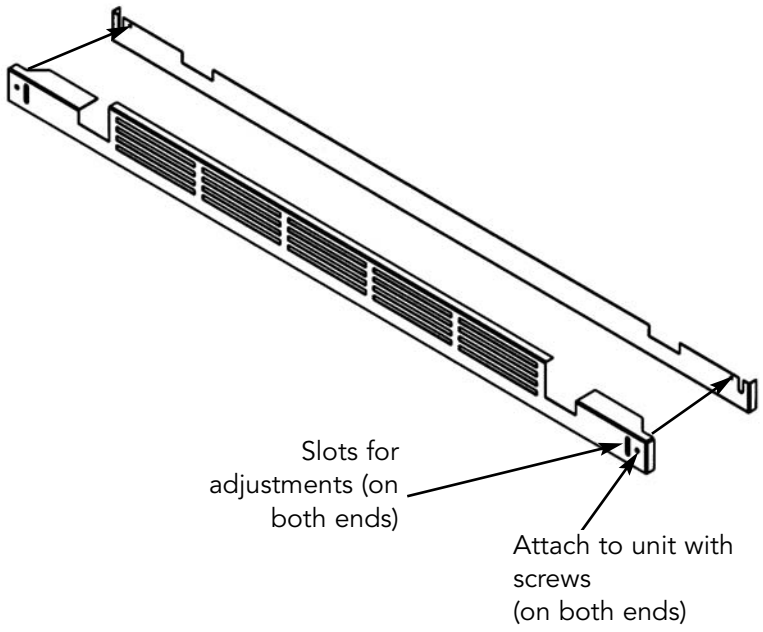

DOOR STOP ADJUSTMENT

1. Using a 3/16" allen wrench, remove door stop pin located in bottom hinge.
2. The pin is factory set 110°. For 120° swing, move the pin to the utmost forward stop hole. For 90° swing, move the pin to the utmost rear stop hole.

HINGE ADJUSTMENT

1. Using a 3/16" allen wrench, remove the door stop pin located in bottom hinge.
2. Using the height adjustment shim as a wrenching device, rotate the height adjustment bushing counterclockwise to raise or clockwise to lower the location of the door.
3. When proper adjustment is reached, align shim with door stop pin holes and replace door stop pin. Firmly tighten pin in place.

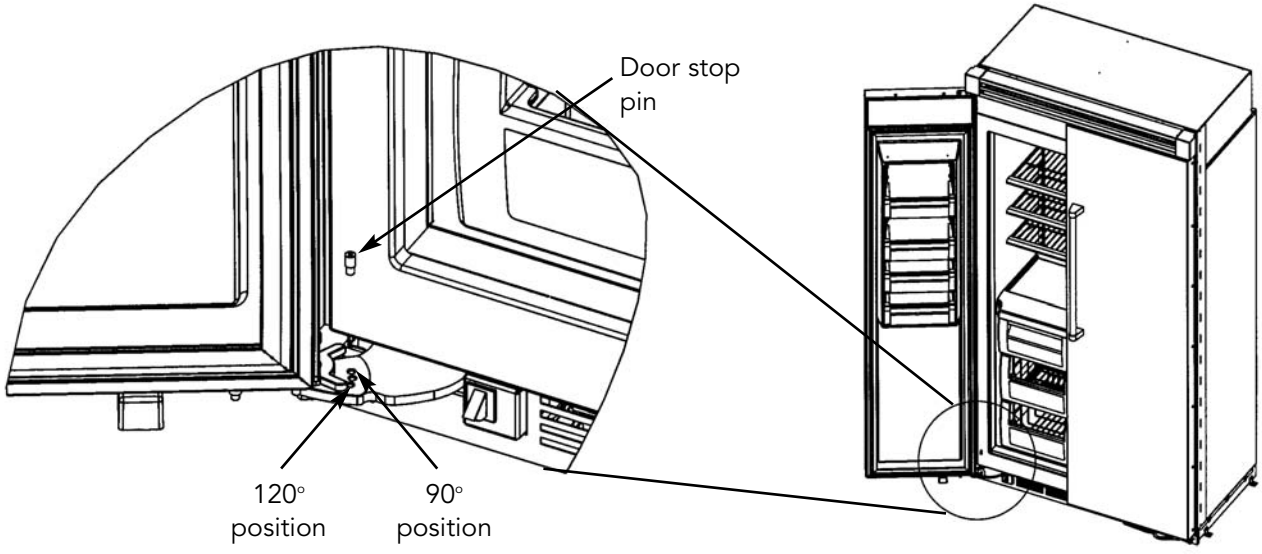

BASIC SPECIFICATIONS AND DIMENSIONS - PROFESSIONAL MODELS

42" W. MODELS

DESCRIPTION	VCSB423	VCSB423D
Overall Width	42" (106.7 cm)	
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to Max. 84 1/16" (213.5 cm)	
Overall Depth from Rear	To front edge of side trim 23 3/16" (56.4 cm) To front of top grille 24 11/16" (62.7 cm) To end of handle 27 1/4" (69.2 cm)	
Cutout Width	41 1/2" (105.4 cm)	
Cutout Height	82 7/8" (210.5 cm) min.; 84 1/16" (213.5 cm) max.	
Cutout Depth	24" (61.0 cm) min.	
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with grounded 3-prong plug attached to product.	
Maximum Amp Usage	9.9 amps	
Inlet Water Requirements	1/4" copper tubing inlet waterline; minimum 20 psi; maximum 120 psi	
Overall Interior Dimensions		
•Refrigerator	15.0 cu. ft. (425 liters)	14.5 cu. ft. (411 liters)
•Freezer	9.0 cu. ft. (255 liters)	8.6 cu. ft. (244 liters)
•Total Capacity	24.0 cu. ft. (680 liters)	23.1 cu. ft. (654 liters)
Approximate Shipping Weight	525 lbs. (236.2 kg)	

48" W. MODELS

DESCRIPTION	VCSB483	VCSB483D
Overall Width	48" (121.9 cm)	
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to Max. 84 1/16" (213.5 cm)	
Overall Depth from Rear	To front edge of side trim 22 3/16" (56.4 cm) To front of top grille 24 11/16" (62.7 cm) To end of handle 27 1/4" (69.2 cm)	
Cutout Width	47 1/2" (120.7 cm)	
Cutout Height	82 7/8" (210.5 cm) min.; 84 1/16" (213.5 cm) max.	
Cutout Depth	24" (61.0 cm) min.	
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with grounded 3-prong plug attached to product.	
Maximum Amp Usage	9.9 amps	11.5 amps
Inlet Water Requirements	1/4" copper tubing inlet waterline; minimum 20 psi; maximum 120 psi	
Overall Interior Dimensions		
•Refrigerator	18.5 cu. ft. (524 liters)	17.9 cu. ft. (507 liters)
•Freezer	8.9 cu. ft. (252 liters)	8.5 cu. ft. (241 liters)
•Total Capacity	27.4 cu. ft. (776 liters)	26.4 cu. ft. (748 liters)
Approximate Shipping Weight	650 lbs. (292.5 kg)	

BASIC SPECIFICATIONS AND DIMENSIONS - DESIGNER MODELS

42" W. MODELS

DESCRIPTION	DDSB423	DDSB423D
Overall Width	42" (106.7 cm)	
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to Max. 84 1/16" (213.5 cm)	
Overall Depth from Rear	To front edge of side trim To front of top grille To end of handle	23 13/16" (60.5 cm) 24" (61.0 cm) 26" (66.0 cm)
Cutout Width	42" (106.7 cm)	
Cutout Height	82 7/8" (210.5 cm) min.; 84 1/16" (213.5 cm) max.	
Cutout Depth	24" (61.0 cm) min.	
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with grounded 3-prong plug attached to product.	
Maximum Amp Usage	9.9 amps	
Inlet Water Requirements	1/4" copper tubing inlet waterline; minimum 20 psi; maximum 120 psi	
Overall Interior Dimensions •Refrigerator •Freezer •Total Capacity	 15.0 cu. ft. (425 liters) 9.0 cu. ft. (255 liters) 24.0 cu. ft. (680 liters)	 14.5 cu. ft. (411 liters) 8.6 cu. ft. (244 liters) 23.1 cu. ft. (654 liters)
Approximate Shipping Weight	525 lbs. (236.2 kg)	

48" W. MODELS

DESCRIPTION	DDSB483	DDSB483D
Overall Width	48" (121.9 cm)	
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to Max. 84 1/16" (213.5 cm)	
Overall Depth from Rear	To front edge of side trim To front of top grille To end of handle	22 13/16" (60.5 cm) 24" (61.0 cm) 26" (66.0 cm)
Cutout Width	48" (121.9 cm)	
Cutout Height	82 7/8" (210.5 cm) min.; 84 1/16" (213.5 cm) max.	
Cutout Depth	24" (61.0 cm) min.	
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with grounded 3-prong plug attached to product.	
Maximum Amp Usage	9.9 amps	11.5 amps
Inlet Water Requirements	1/4" copper tubing inlet waterline; minimum 20 psi; maximum 120 psi	
Overall Interior Dimensions •Refrigerator •Freezer •Total Capacity	 18.5 cu. ft. (524 liters) 8.9 cu. ft. (252 liters) 27.4 cu. ft. (776 liters)	 17.9 cu. ft. (507 liters) 8.5 cu. ft. (241 liters) 26.4 cu. ft. (748 liters)
Approximate Shipping Weight	650 lbs. (292.5 kg)	

BASIC SPECIFICATIONS AND DIMENSIONS - FULL OVERLAY MODELS

42" W. MODELS

DESCRIPTION	DfSB423	DfSB423D
Overall Width	42" (106.7 cm)	
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to Max. 84 1/16" (213.5 cm)	
Overall Depth from Rear	To front edge of side trim To front of top grille To end of handle	23 13/16" (60.5 cm) 24 3/4" (62.9 cm) 24" (61.0 cm)
Cutout Width	42" (106.7 cm)	
Cutout Height	82 7/8" (210.5 cm) min.; 84 1/16" (213.5 cm) max.	
Cutout Depth	24" (61.0 cm) min.	
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with grounded 3-prong plug attached to product.	
Maximum Amp Usage	9.9 amps	
Inlet Water Requirements	1/4" copper tubing inlet waterline; minimum 20 psi; maximum 120 psi	
Overall Interior Dimensions •Refrigerator •Freezer •Total Capacity	 15.0 cu. ft. (425 liters) 9.0 cu. ft. (255 liters) 24.0 cu. ft. (680 liters)	 14.5 cu. ft. (411 liters) 8.6 cu. ft. (244 liters) 23.1 cu. ft. (654 liters)
Approximate Shipping Weight	525 lbs. (236.2 kg)	

48" W. MODELS

DESCRIPTION	DfSB483	DfSB483D
Overall Width	48" (121.9 cm)	
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to Max. 84 1/16" (213.5 cm)	
Overall Depth from Rear	To front edge of side trim To front of top grille To end of handle	22 13/16" (60.5 cm) 24" (61.0 cm) 26" (66.0 cm)
Cutout Width	48" (121.9 cm)	
Cutout Height	82 7/8" (210.5 cm) min.; 84 1/16" (213.5 cm) max.	
Cutout Depth	24" (61.0 cm) min.	
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with grounded 3-prong plug attached to product.	
Maximum Amp Usage	9.9 amps	11.5 amps
Inlet Water Requirements	1/4" copper tubing inlet waterline; minimum 20 psi; maximum 120 psi	
Overall Interior Dimensions •Refrigerator •Freezer •Total Capacity	 18.5 cu. ft. (524 liters) 8.9 cu. ft. (252 liters) 27.4 cu. ft. (776 liters)	 17.9 cu. ft. (507 liters) 8.5 cu. ft. (241 liters) 26.4 cu. ft. (748 liters)
Approximate Shipping Weight	650 lbs. (292.5 kg)	

*Full overlay models fit flush in 25" (63.5 cm) deep cabinet openings. They can be installed in standard 24" (61.0 cm) deep openings. The door faces and top grille will protrude 34" (1.9 cm) into the room.

WIRING DIAGRAM
BUILT-IN SIDE-BY-SIDE 42" W. REFRIGERATOR - NON-DISPENSER MODEL

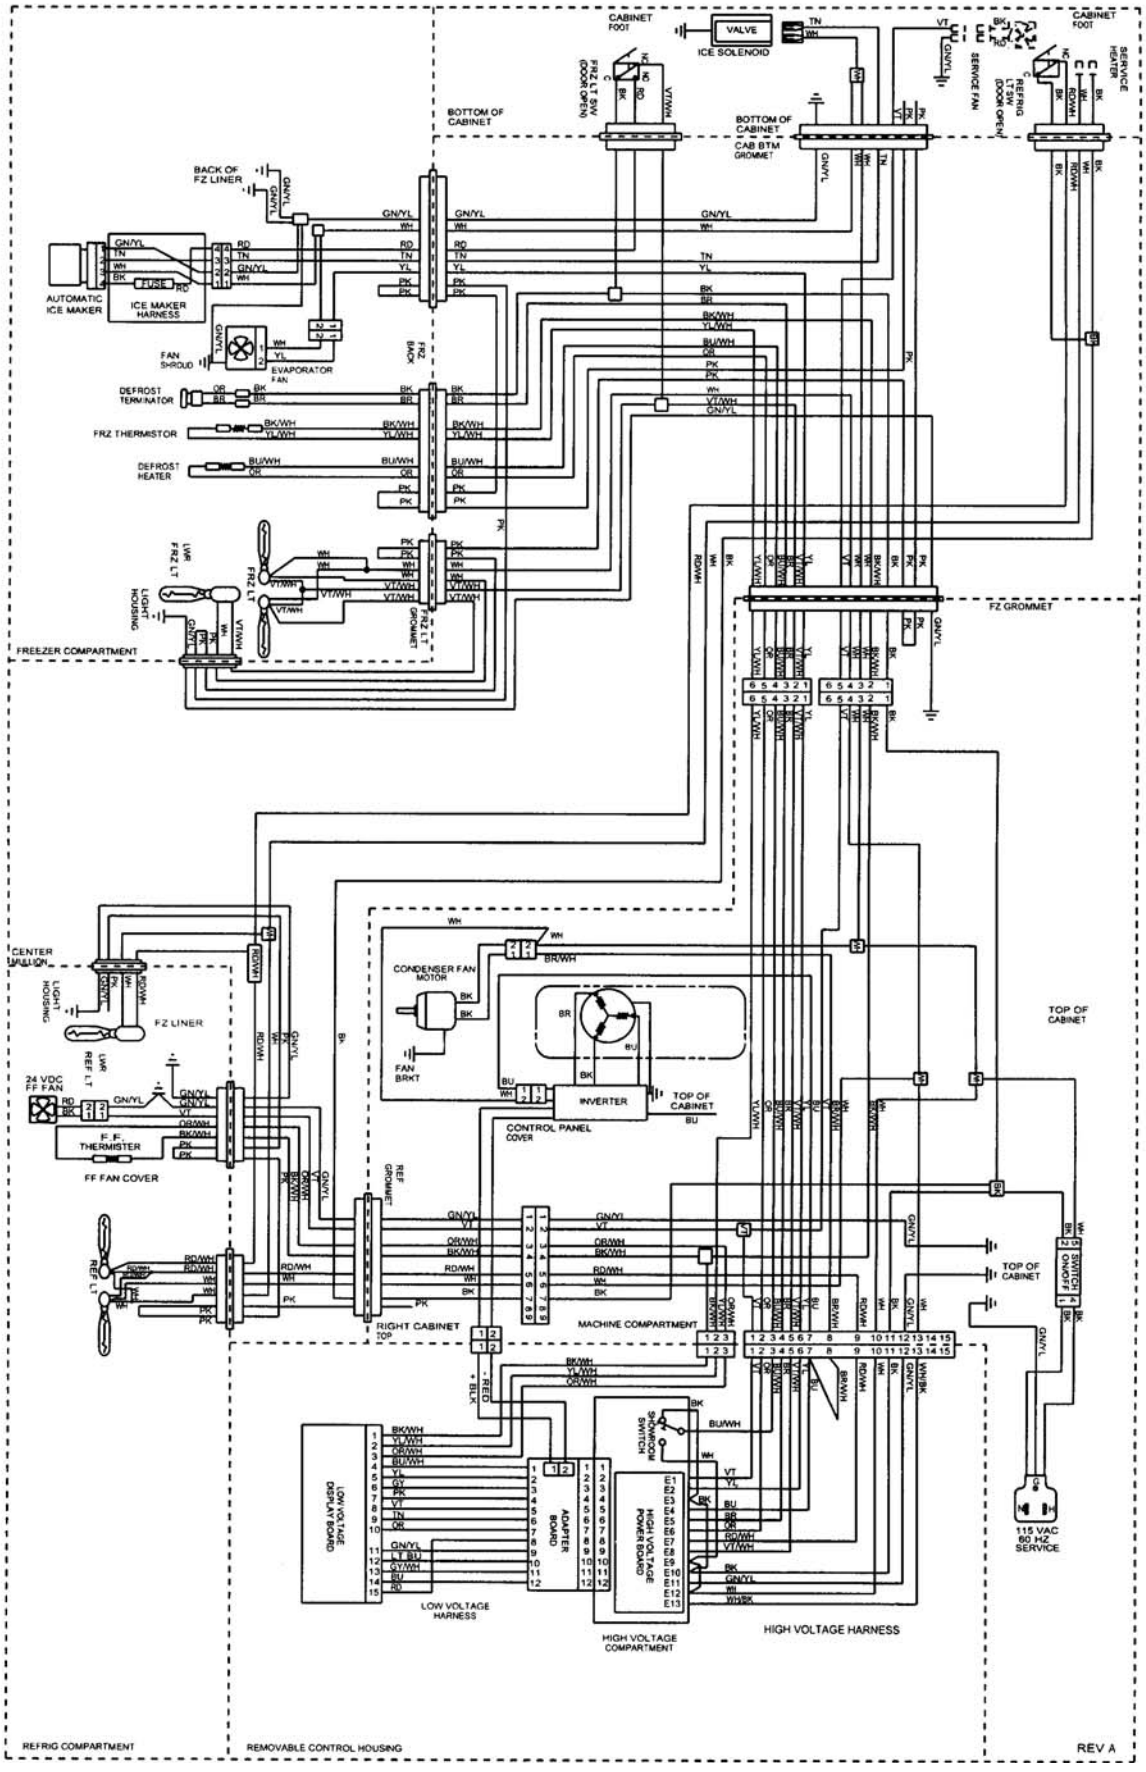

WARNING:
ELECTRICAL GROUNDING INSTRUCTIONS

This appliance is equipped with a three prong grounding plug for your protection against shock hazard and should be plugged directly into a properly grounded three prong receptacle. DO NOT CUT OR REMOVE THE GROUNDING PRONG FROM THIS PLUG.

REFER ONLY TO FEATURES WHICH ARE EQUIPPED WITH THIS UNIT.

WIRING DIAGRAM
BUILT-IN SIDE-BY-SIDE 42" W. REFRIGERATOR - DISPENSER MODEL

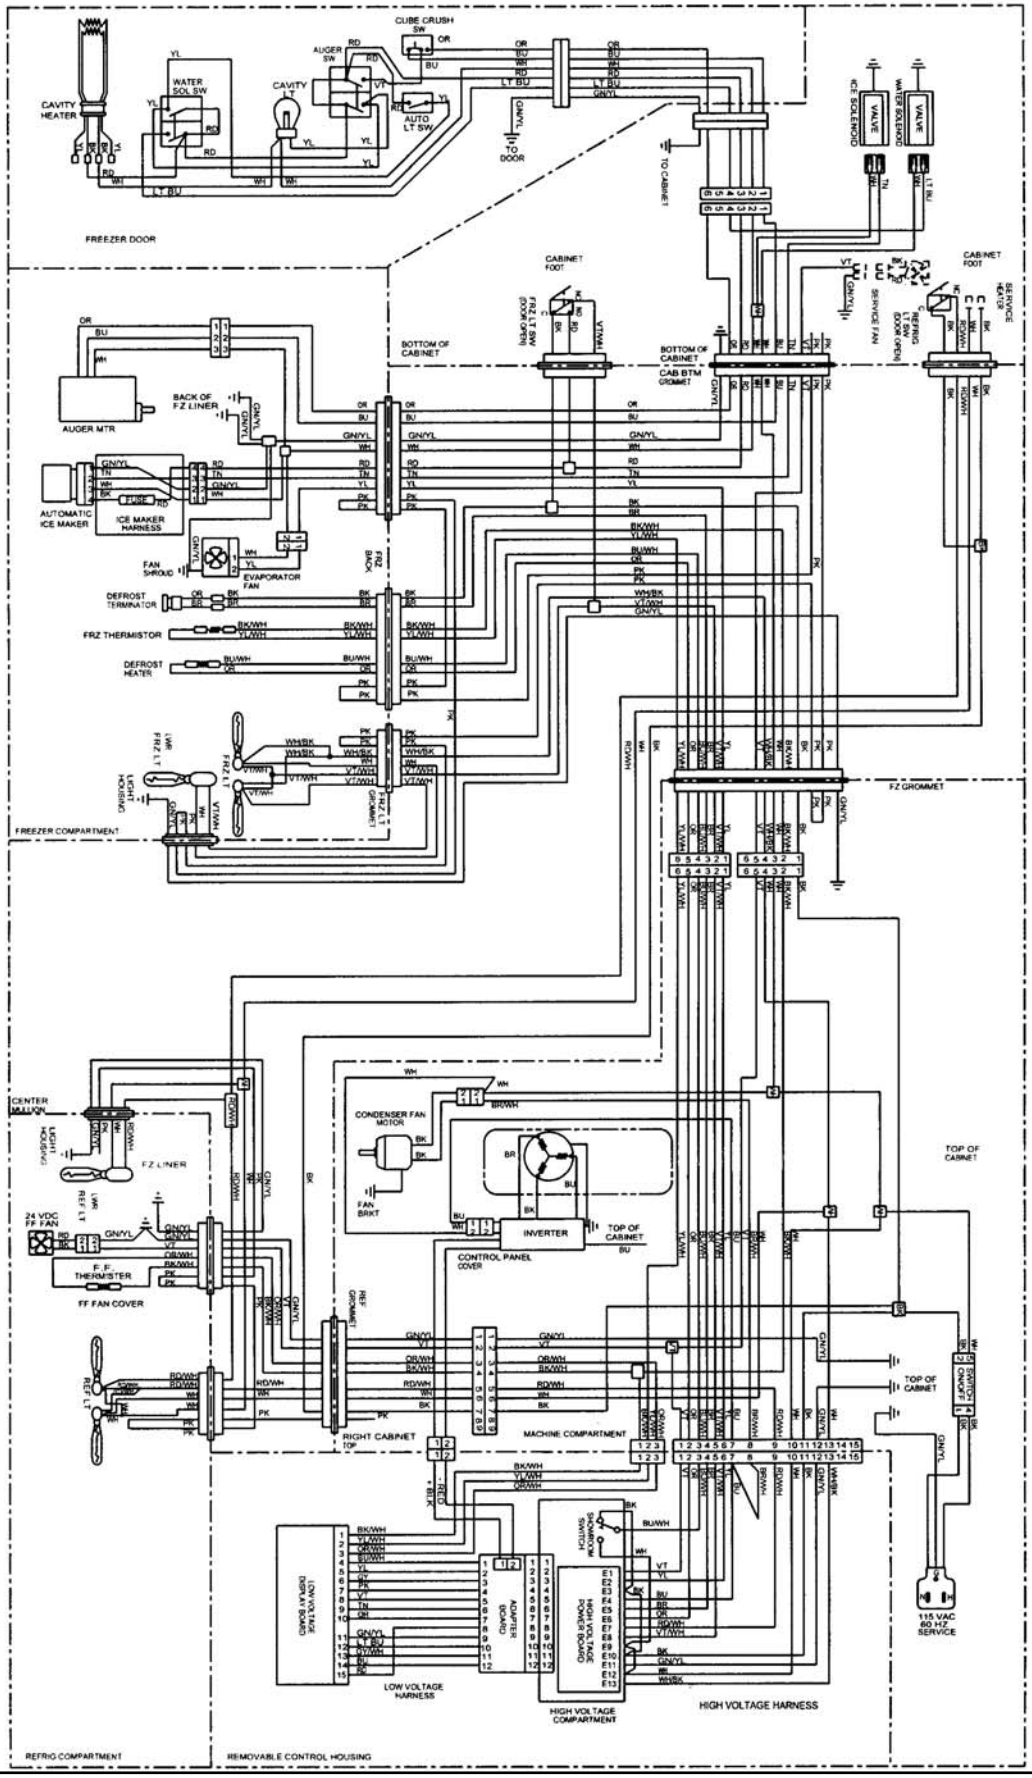

WARNING:
ELECTRICAL GROUNDING INSTRUCTIONS

This appliance is equipped with a three prong grounding plug for your protection against shock hazard and should be plugged directly into a properly grounded three prong receptacle. DO NOT CUT OR REMOVE THE GROUNDING PRONG FROM THIS PLUG.

REFER ONLY TO FEATURES WHICH ARE EQUIPPED WITH THIS UNIT.

WIRING DIAGRAM
BUILT-IN SIDE-BY-SIDE 48" W. REFRIGERATOR - NON-DISPENSER MODEL

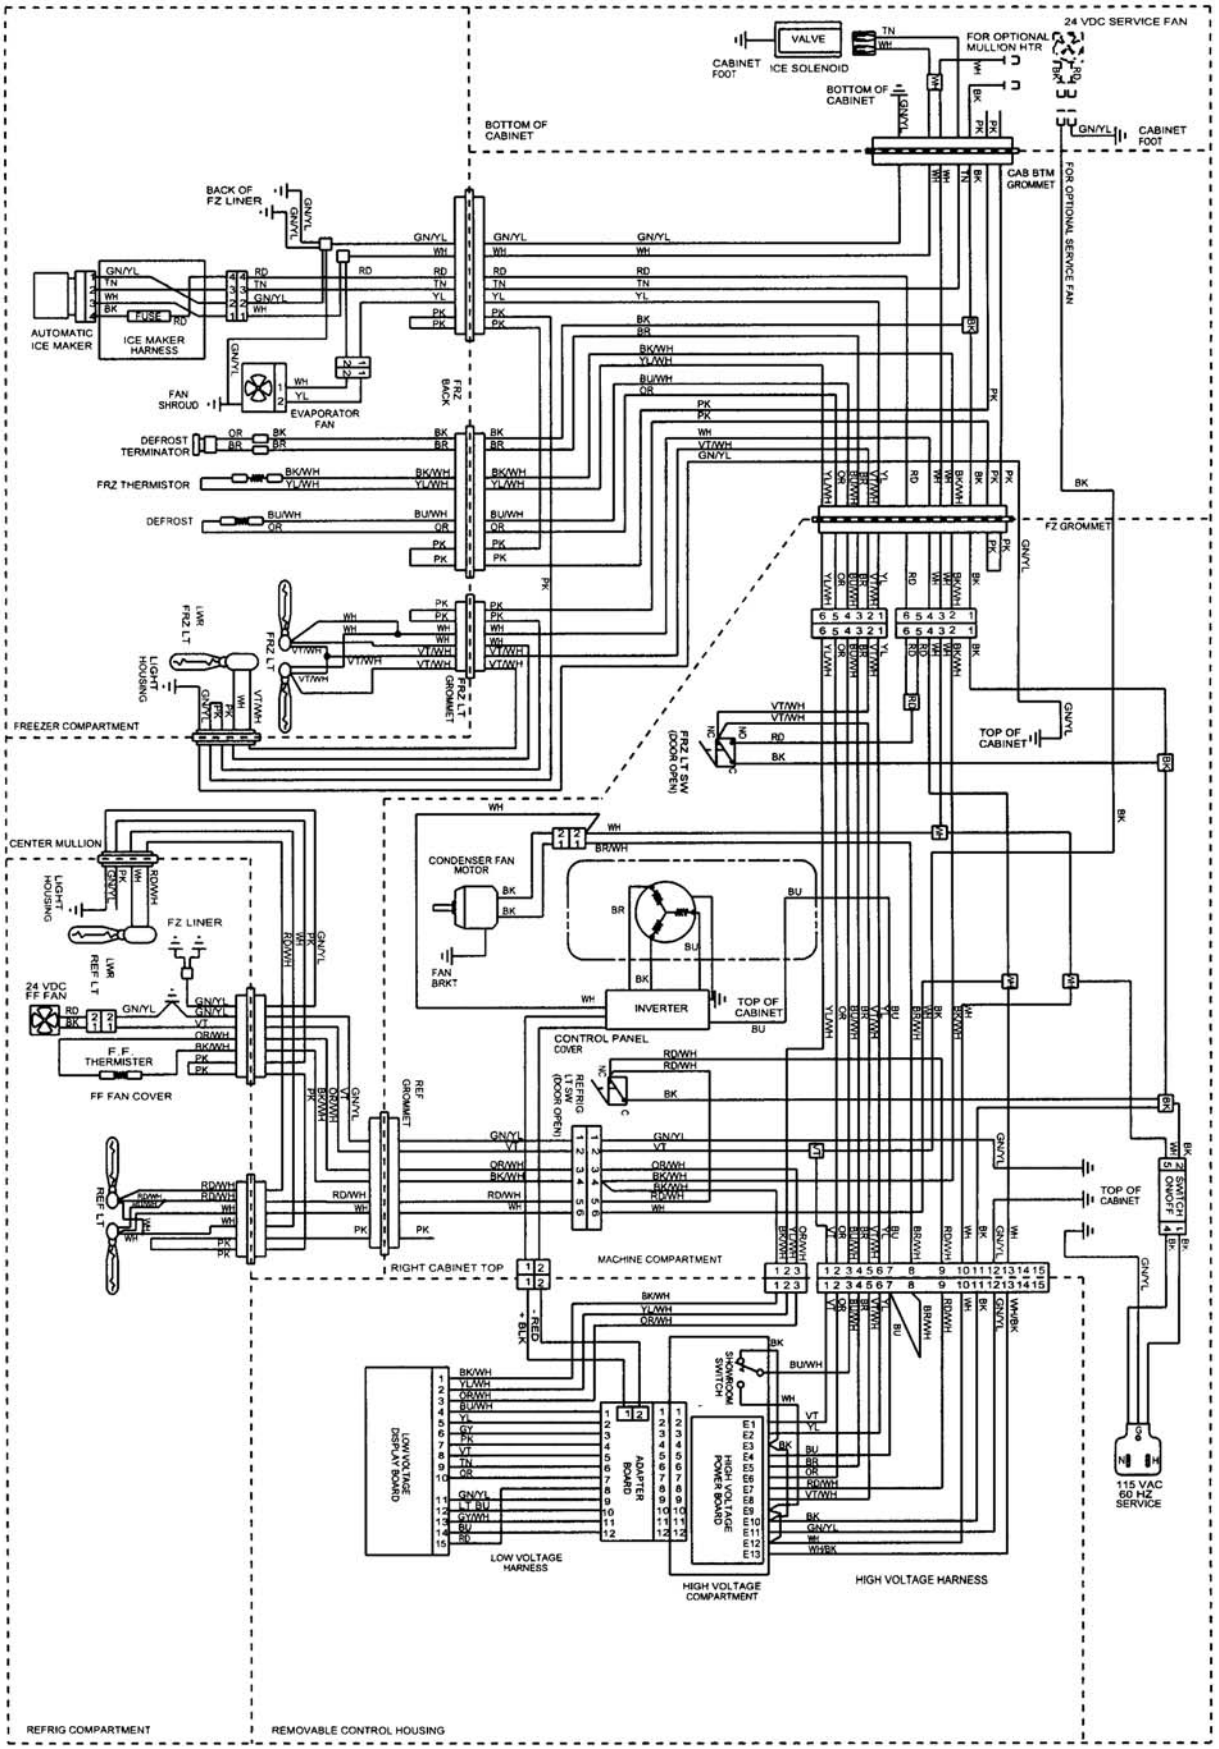

WARNING:
ELECTRICAL GROUNDING INSTRUCTIONS
This appliance is equipped with a three prong grounding plug for your protection against shock hazard and should be plugged directly into a properly grounded three prong receptacle. DO NOT CUT OR REMOVE THE GROUNDING PRONG FROM THIS PLUG.

REFER ONLY TO FEATURES WHICH ARE EQUIPPED WITH THIS UNIT.

WIRING DIAGRAM
BUILT-IN SIDE-BY-SIDE 48" W. REFRIGERATOR - DISPENSER MODEL

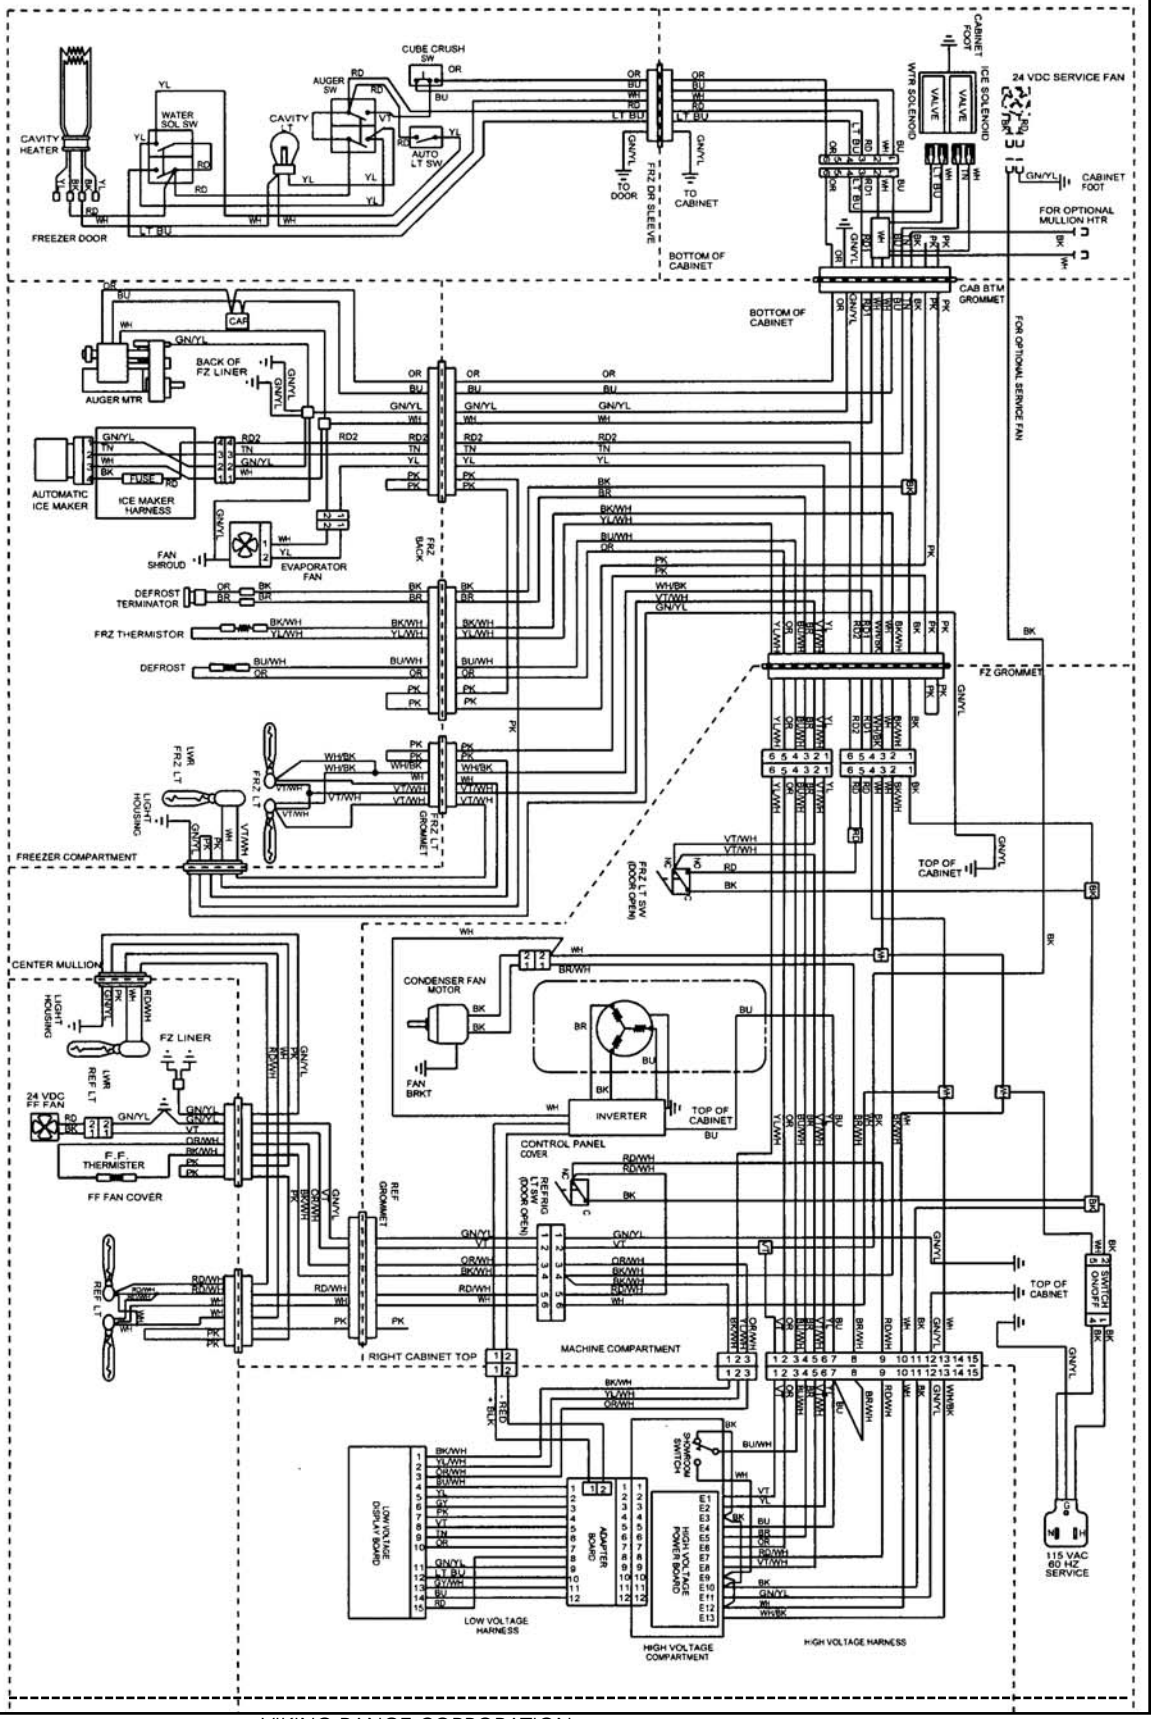

WARNING:
ELECTRICAL GROUNDING INSTRUCTIONS

This appliance is equipped with a three prong grounding plug for your protection against shock hazard and should be plugged directly into a properly grounded three prong receptacle. DO NOT CUT OR REMOVE THE GROUNDING PRONG FROM THIS PLUG.

REFER ONLY TO FEATURES WHICH ARE EQUIPPED WITH THIS UNIT.

VIKING RANGE CORPORATION
111 Front Street • Greenwood, Mississippi 38930 USA • (662) 455-1200

Specifications subject to change without notice
For more product information, call 1-888-VIKING1 (845-4644), or visit our web site at http://www.vikingrange.com